



# PROTEUS™ SMARTY HYBRID

user manual

©2022 ELATION PROFESSIONAL all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ELATION PROFESSIONAL logo and identifying product names and numbers herein are trademarks of ELATION PROFESSIONAL. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ELATION brands and product names are trademarks or registered trademarks of their respective companies.

**ELATION PROFESSIONAL** and all affiliated companies hereby disclaim all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or because of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

**Elation Professional USA** | 6122 S. Eastern Ave. | Los Angeles, CA. 90040  
 323-582-3322 | 323-832-9142 fax | [www.elationlighting.com](http://www.elationlighting.com) | [info@elationlighting.com](mailto:info@elationlighting.com)

**Elation Professional B.V.** | Junostraat 2 | 6468 EW Kerkrade, The Netherlands  
 +31 45 546 85 66 | +31 45 546 85 96 fax | [www.elationlighting.eu](http://www.elationlighting.eu) | [info@elationlighting.eu](mailto:info@elationlighting.eu)

**Elation Professional Mexico** | AV Santa Ana 30 | Parque Industrial Lerma, Lerma, Mexico 52000  
 +52 (728) 282-7070

## DOCUMENT VERSION



Due to additional product features and/or enhancements, an updated version of this document may be available online. Please scan the QR Code with your mobile device or visit [www.elationlighting.com](http://www.elationlighting.com) for the latest revision/update of this manual, before installation and/or programming.

| Date     | Document Version | Software Version ≥ | DMX Channel Modes | Notes   |
|----------|------------------|--------------------|-------------------|---|
| 08/28/19 | 1.0              | 1.1.3              | 20 / 34           | Initial release.  |
| 08/14/20 | 1.2              | N/C                | NO CHANGE         | Updated thermal   |
| 10/16/20 | 1.4              | N/C                | NO CHANGE         | Updated specifications  |
| 3/11/21  | 1.6              | N/C                | NO CHANGE         | Updated sun protection, FCC, and primary/secondary modes  |
| 6/22/21  | 1.8              | N/C                | NO CHANGE         | Updated Maintenance and Dimensional Drawings.   |
| 5/23/22  | 2.0              | N/C                | NO CHANGE         | Updated Fixture Installation to add orientation guidelines, added E-Loader III notice to System Menu.         |
| 7/21/22  | 2.2              | N/C                | NO CHANGE         | Updated General Information, Gobo Installation, Installation Guidelines; added Remote Device Management (RDM) |

# CONTENTS

|                                      |    |
|--------------------------------------|----|
| General Information                  | 4  |
| Warranty (USA Only)                  | 5  |
| Safety Guidelines                    | 6  |
| Discharge Lamp Warning               | 8  |
| Maintenance Guidelines               | 9  |
| Fixture Overview                     | 10 |
| Colors, Gobos, Animation             | 11 |
| Custom Gobos                         | 12 |
| Gobo Installation                    | 13 |
| Torque Settings for Screws           | 19 |
| Lamp Replacement                     | 21 |
| Installation Guidelines              | 26 |
| Remote Device Management (RDM)       | 33 |
| System Menu                          | 34 |
| DMX Channel Functions and Values     | 42 |
| Error Codes                          | 51 |
| Specifications                       | 52 |
| Dimensional Drawings                 | 53 |
| Optional Accessories   FCC Statement | 55 |

# GENERAL INFORMATION

## INTRODUCTION

Please read and understand the instructions in this manual carefully and thoroughly before attempting to operate this device. These instructions contain important safety and use information. **This device is intended for use by professionally trained personnel only, and is not suitable for private use.**

## IP65 RATED

An IP rated lighting fixture is one, which is commonly installed in outdoor environments and has been designed with an enclosure that effectively protects the ingress (entry) of external foreign objects such as dust and water. The **International Protection (IP)** rating system is commonly expressed as "**IP**" (Ingress Protection) followed by two numbers (i.e. IP65) where the numbers define the degree of protection. The first digit (Foreign Bodies Protection) indicates the extent of protection against particles entering the fixture and the second digit (Water Protection) indicates the extent of protection against water entering the fixture. An **IP65** rated lighting fixture is one, which has been designed and tested to protect against the ingress of dust **(6)** and low-pressure water jets from any direction **(5)**.

## UNPACKING

Every device has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton is damaged, carefully inspect the device for damage, and be sure all accessories necessary to install and operate the device have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this device to your dealer without first contacting customer support. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

## BOX CONTENTS

Omega Brackets (x2)  
IP Rated 5pin DMX Cable  
IP Rated Ethernet RJ45 Cable  
Power Cable

## CUSTOMER SUPPORT

Contact **ELATION Service** for any product related service and support needs. Also visit [forums.elationlighting.com](https://forums.elationlighting.com) with questions, comments or suggestions.

**ELATION SERVICE USA - Monday - Friday 8:00am to 4:30pm PST**  
**323-582-3322 | Fax 323-832-9142 | [support@elationlighting.com](mailto:support@elationlighting.com)**

**ELATION SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET**  
**+31 45 546 85 63 | Fax +31 45 546 85 96 | [support@elationlighting.eu](mailto:support@elationlighting.eu)**

**REPLACEMENT PARTS** please visit [parts.elationlighting.com](https://parts.elationlighting.com)

## **WARRANTY (USA ONLY)**

- A. This ULTIMATE WARRANTY covers the first two years of operation or 6,000 hours of use, whichever comes first, based on regular maintenance for the fixture and lamp. This comprehensive warranty for a 2-year period covers material and workmanship of the fixture, including the highly efficient Philips Platinum FLEX 200 lamp. Elation Professional warrants product rechargeable batteries to be free of manufacturing defects in material and workmanship for a period of six months (180 days) from the original date of purchase. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.
- B. For warranty service, send the product only to the Elation Professional factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, Elation Professional will pay return shipping charges only to a designated point within the United States. If any product is sent, it must be shipped in its original package and packaging material. No accessories should be shipped with the product. If any accessories are shipped with the product, Elation Professional shall have no liability whatsoever for loss and/or or damage to any such accessories, nor for the safe return thereof.
- C. This warranty is void if the product serial number and/or labels are altered or removed; if the product is modified in any manner which Elation Professional concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the Elation Professional factory unless prior written authorization was issued to purchaser by Elation Professional; if the product is damaged because not properly maintained as set forth in the product instructions, guidelines and/or user manual.
- D. This is not a service contract, and this warranty does not include any maintenance, cleaning, or periodic check-up. During the periods as specified above, Elation Professional will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of Elation Professional under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of Elation Professional. All products covered by this warranty were manufactured after January 1, 1990, and bare identifying marks to that effect.
- E. Elation Professional reserves the right to make changes in design and/or performance improvements upon its products without any obligation to include these changes in any products theretofore manufactured.
- F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with the products described above. Except to the extent prohibited by applicable law, all implied warranties made by Elation Professional in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty periods set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said periods have expired. The consumer's and/or dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall Elation Professional be liable for any loss and/or damage, direct and/or consequential, arising out of the use of, and/or the inability to use, this product.
- G. This warranty is the only written warranty applicable to Elation Professional products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

## **WARRANTY RETURNS**

All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper and included in the shipping container. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. Items returned without a R.A. number clearly marked on the outside of the package will be refused and returned at customer's expense. You may obtain a R.A. number by contacting customer support.

# SAFETY GUIDELINES

This fixture is a sophisticated piece of electronic equipment. To guarantee a smooth operation, it is important to follow all instructions and guidelines in this manual. Elation Professional is not responsible for injury and/or damages resulting from the misuse of this fixture due to the disregard of the information printed in this manual. Only qualified and/or certified personnel should perform installation of this fixture and only the original rigging parts (omega brackets) included with this fixture should be used for installation. Any modifications to the fixture and/or the included mounting hardware will void the original manufactures warranty and increase the risk of damage and/or personal injury.



**PROTECTION CLASS 1 - FIXTURE MUST BE PROPERLY GROUNDED**



**THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT.  
DO NOT ATTEMPT ANY REPAIRS YOURSELF; DOING SO WILL VOID YOUR  
MANUFACTURES WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS  
TO THIS FIXTURE AND/OR THE DISREGARD OF SAFETY INSTRUCTIONS AND  
GUIDELINES IN THIS MANUAL VOID THE MANUFACTURES WARRANTY AND  
ARE NOT SUBJECT TO ANY WARRANTY CLAIMS AND/OR REPAIRS.**



**DO NOT PLUG FIXTURE INTO A DIMMER PACK!  
NEVER OPEN THIS FIXTURE WHILE IN USE!  
UNPLUG POWER BEFORE SERVICING FIXTURE!  
NEVER TOUCH FIXTURE DURING OPERATION, AS IT MAY BE HOT!  
KEEP FLAMMABLE MATERIALS AWAY FROM FIXTURE!**



**NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE!  
RETINA INJURY RISK - MAY INDUCE BLINDNESS!  
SENSITIVE PERSONS MAY SUFFER AN EPILEPTIC SHOCK!**



**ENSURE ALL CONNECTIONS AND END CAPS ARE PROPERLY SEALED WITH A  
DIELECTRIC GREASE (AVAILABLE AT MOST ELECTRICAL SUPPLIERS) TO  
PREVENT WATER CORROSION AND/OR ELECTRICAL SHORT CIRCUIT.**



**MINIMUM DISTANCE TO OBJECTS/SURFACES  
MUST BE 49.2 FEET (15 METERS)  
MAXIMUM TEMP OF EXTERNAL SURFACE 185° F (85°C)  
MINIMUM DISTANCE OF INFLAMMABLE MATERIALS  
FROM THE SURFACE 1.6 FEET (0.5 METER)**

# SAFETY GUIDELINES

## **CAUTION**

**HIGH  
INTENSITY  
ULTRAVIOLET  
LIGHT**



AVOID DIRECT EYE & SKIN EXPOSURE.  
WEAR PROPER EYE & SKIN PROTECTION.  
SEE MANUAL FOR SAFETY INSTRUCTIONS.

**RISK GROUP 3 - RISK OF EXPOSURE TO ULTRAVIOLET UV RADIATION! FIXTURE EMITS HIGH INTENSITY WAVELENGTH OF ULTRAVIOLET UV LIGHT FROM THE UV COLOR FILTER. WEAR PROPER EYE AND SKIN PROTECTION. AVOID PROLONGED PERIODS OF EXPOSURE TO UV COLOR FILTER. AVOID WEARING WHITE COLOR CLOTHING AND/OR USING UV PAINTS ON SKIN. AVOID DIRECT EYE AND/OR SKIN EXPOSURE AT DISTANCES LESS THAN 11 feet (3.3m). DO NOT OPERATE FIXTURE WITH DAMAGED/MISSING EXTERNAL COVERS. DO NOT LOOK DIRECTLY**

**INTO THE UV LIGHT AND/OR VIEW UV LIGHT DIRECTLY WITH OPTICAL INSTRUMENTS THAT MAY CONCENTRATE THE LIGHT/RADIATION OUTPUT. INDIVIDUALS SUFFERING FROM A RANGE OF EYE CONDITIONS, SUNLIGHT EXPOSURE DIS-ORDERS, OR INDIVIDUALS USING PHOTSENSITIVE MEDICATION, MAY RECEIVE DISCOMFORT IF EXPOSED TO THE ULTRAVIOLET UV LIGHT EMITTED FROM THE UV LED.**

**DO NOT TOUCH** the fixture housing during operation. Turn OFF the power and allow approximately 15 minutes for the fixture to cool down before serving.

**DO NOT** shake fixture, avoid brute force when installing and/or operating fixture.

**DO NOT** operate fixture if the power cord is frayed, crimped, damaged and/or if any of the power cord connectors are damaged and do not insert into the fixture securely with ease. **NEVER** force a power cord connector into the fixture. If the power cord or any of its connectors are damaged, replace it immediately with a new one of similar power rating.

**DO NOT** block any air ventilation slots.

All fan and air inlets must remain clean and never blocked.

Allow approx. 6" (15cm) between fixture and other devices or a wall for proper cooling.


Always disconnect fixture from main power source before performing any type of service and/or cleaning procedure. Only handle the power cord by the plug end, never pull out the plug by tugging the wire portion of the cord.

During the initial operation of this fixture, a light smoke or smell may emit from the interior of the fixture. This is a normal process and is caused by excess paint in the interior of the casing burning off from the heat associated with the lamp and will decrease gradually over time.

Consistent operational breaks will ensure fixture will function properly for many years.

**ONLY** use the original packaging and materials to transport the fixture in for service.

# DISCHARGE LAMP WARNING

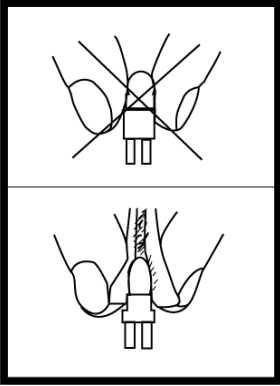

This fixture is fitted with a DISCHARGE LAMP, which is highly susceptible to damage if improperly handled. NEVER touch the lamp with your bare hands, as the oil from your hands will shorten the life of the lamp. NEVER move the fixture until the lamp has had ample time to cool. DISCHARGE LAMPS are NOT covered under warranty conditions. Avoid switching the fixture ON and OFF repeatedly in short intervals, as this will reduce lamp life and intensity. To achieve the intensity associated with discharge lamps, these lamps use gas sealed in a high-pressure environment to emit a brilliant output.

Due to the high pressure involved with the construction of the lamp, it **MAY EXPLODE DURING PROLONGED EXTENSIVE USE**. This risk is increased with age; added care is encouraged when dealing with older lamps. Thus, the lamp must always be replaced at the end of their recommended duty cycle. Extreme caution should be used when operating this or any fixture fitted with a gas discharge lamp.

## UV RADIATION NOTICE



**THIS FIXTURE EMITS INTENSE UV RADIATION, WHICH IS HARMFUL TO THE EYES AND SKIN. THE INTENSE LUMINANCE OF THE LAMP CAN CAUSE SEVERE DAMAGE TO THE RETINA. NEVER OPERATE THIS FIXTURE WITH ANY OF THE PROTECTIVE COVERS REMOVED. THESE COVERS HAVE BEEN SPECIALLY DESIGNED TO SHIELD AGAINST UV RADIATION.**

## LAMP REPLACEMENT

**USE ONLY GENUINE ORIGINAL PHILIPS™ LAMPS. OTHER BRAND LAMPS WILL CAUSE DAMAGE AND WILL VOID FIXTURE WARRANTY!**



**DISCONNECT THE MAIN POWER SUPPLY BEFORE REPLACING LAMP!  
FIXTURE MUST COOL FOR 60 MINUTES BEFORE REPLACING LAMP!**

**NEVER TOUCH LAMP WITH BARE HANDS, ALWAYS WEAR GLOVES!  
OIL FROM HANDS WILL SHORTEN LIFE OF LAMP!**

**MAKE SURE ALL COVERS/PANELS ARE REPLACED/SECURED BEFORE OPERATING FIXTURE TO PREVENT ANY RISK AND/OR DAMAGE TO EYE RETINA FROM UV RADIATION EXPOSURE!**



# MAINTENANCE GUIDELINES



**DISCONNECT POWER BEFORE PERFORMING ANY MAINTENANCE!**

## CLEANING

Frequent cleaning is recommended to insure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky or particularly dirty environments can cause greater accumulation of dirt on the fixture's optics. Clean the external lens surface at least every 20 days with a soft cloth to avoid dirt/debris accumulation.

**NEVER** use alcohol, solvents, or ammonia-based cleaners.

## MAINTENANCE

Regular inspections are recommended to insure proper function and extended life.

There are no user serviceable parts inside this fixture, please refer all other service issues to an authorized Elation service technician. Should you need any spare parts, please order genuine parts from your local Elation dealer.

Please refer to the following points during routine inspections:


- A detailed electric check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- Be sure all screws and fasteners are securely tightened at all times. Loose screws may fall out during normal operation resulting in damage or injury as larger parts could fall.
- Check for any deformations on the housing, color lenses, rigging hardware and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust to enter into the fixture. Damaged rigging points or unsecured rigging could cause the fixture to fall and seriously injure a person(s).
- Electric power supply cables must not show any damage, material fatigue or sediments.  
**NEVER** remove the ground prong from the power cable.

## FIXTURE DISASSEMBLY


The following points should be observed after performing any maintenance procedure that requires disassembly of the unit:

- After the unit has been reassembled, open the valve, and allow the light to run for approximately 2 hours in order to dry out any moisture that has been trapped inside the fixture. The process should continue until indicated humidity drops below 15% for the head and 30% for the base.
- Once this has been achieved, the light can be switched off, but the unit should remain connected to power so that the cooling fan can cool down the unit. Please note that allowing cool down time should ALWAYS be done after lamp operation.
- Some units may require partial disassembly in order to gain access to the valve. Please contact Elation service for information regarding the location and access procedure for the valve on your specific unit model.

# FIXTURE OVERVIEW

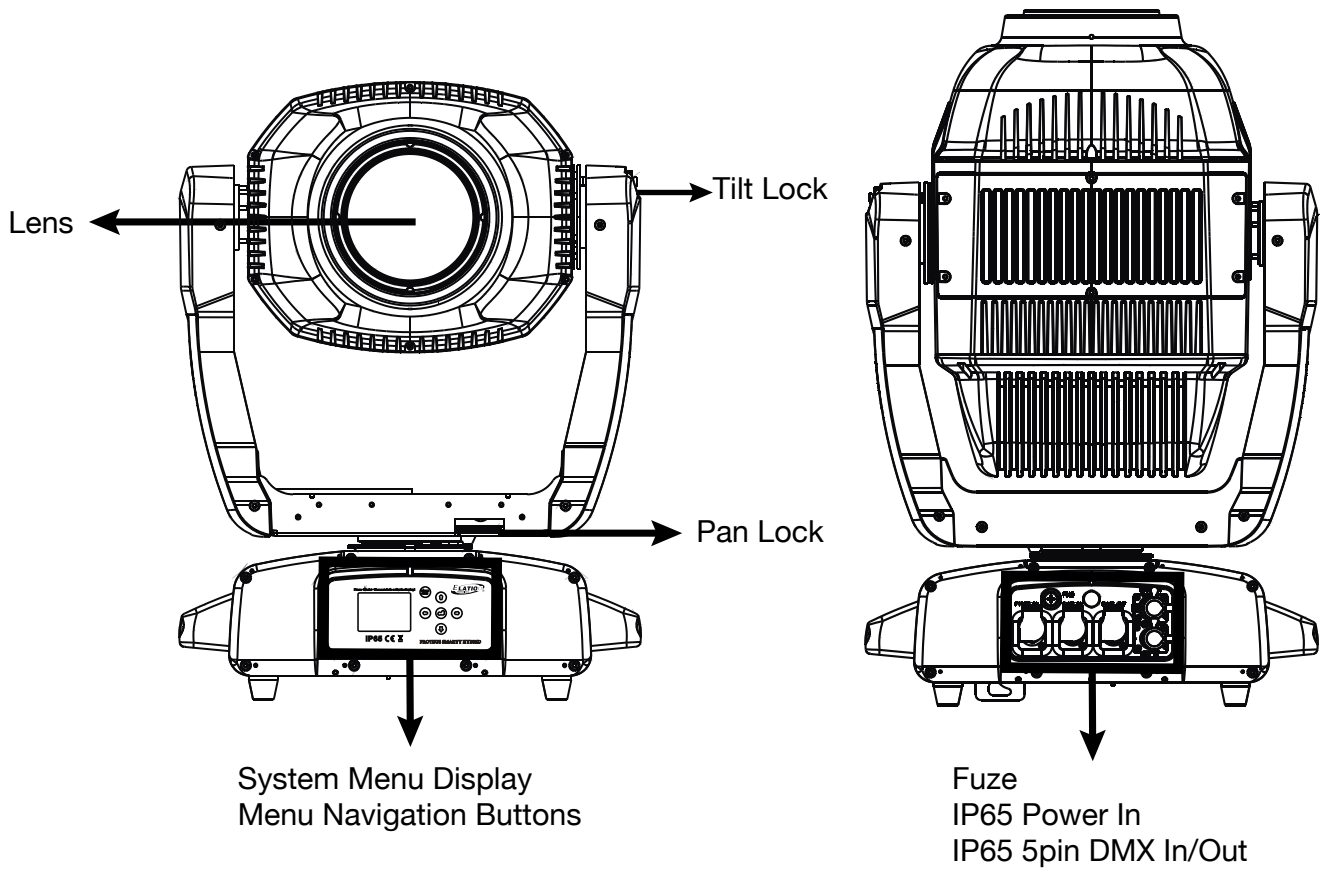


## SAFETY CABLE ATTACHMENT

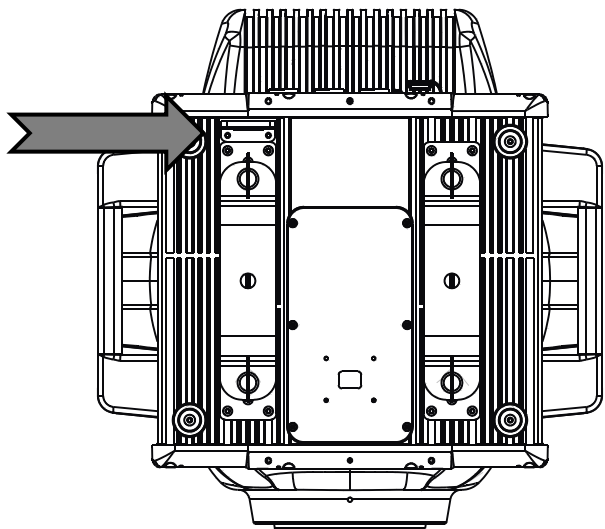


**ALWAYS ATTACH A SAFETY CABLE WHENEVER INSTALLING THIS DEVICE IN A SUSPENDED ENVIRONMENT TO ENSURE THE FIXTURE WILL NOT**

# COLORS, GOBOS, ANIMATION

## COLOR WHEEL

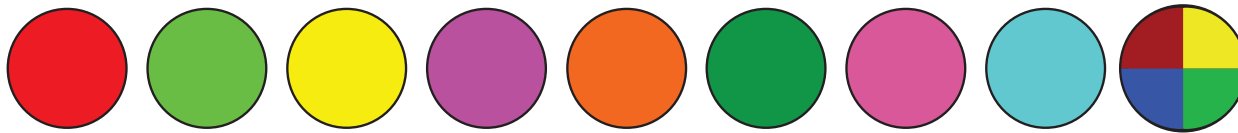

1 Red 2 Green 3 Yellow 4 Magenta 5 Orange 6 Aqua 7 Pink 8 Cyan 9 RYBG

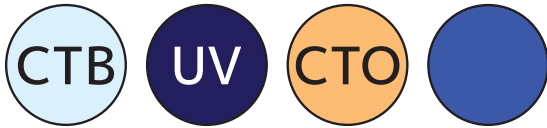

10 CTB 11 UV 12 CTO 13 Blue

## COLOR FLAGS



CYAN MAGENTA YELLOW

## INTERCHANGEABLE-ROTATING GLASS GOBO WHEEL 1




1 2 3 4 5 6 7 8

## STATIC-FIXED METAL GOBO WHEEL 2



1 2 3 4 5 6 7 8 9 10 11 12

# CUSTOM GOBOS

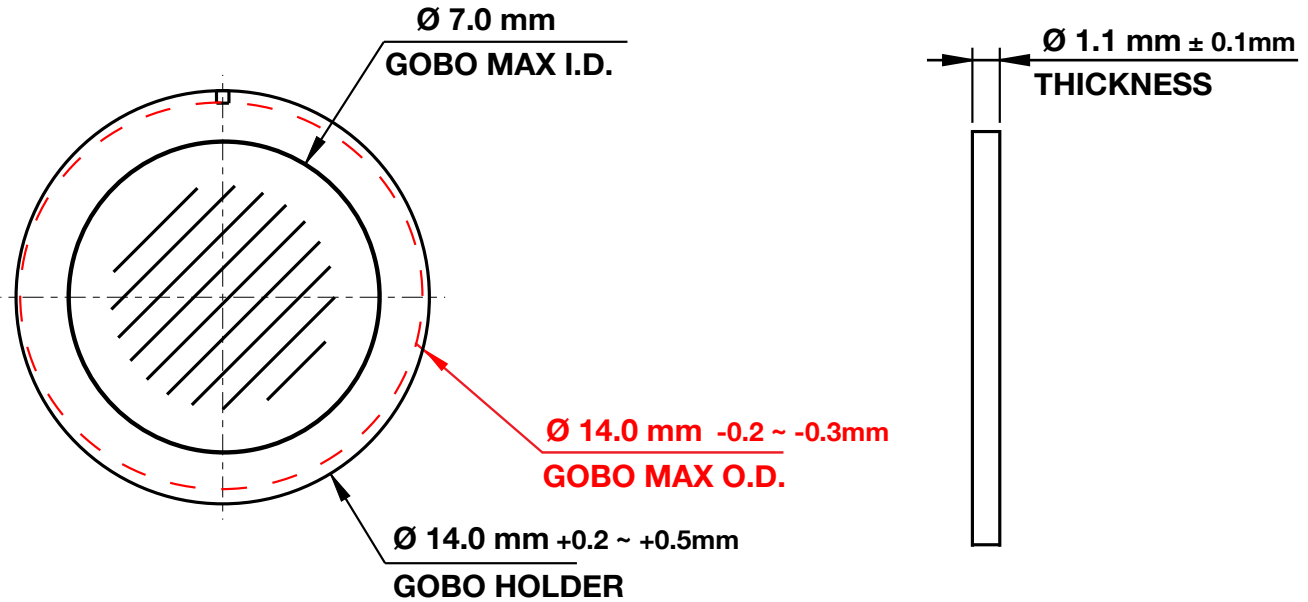

| ROTATING GLASS GOBOS - WHEEL 1  |  |
|---------------------------------|--|
| Gobo O.D. (Max. Outer Diameter) | $\text{Ø } 14\text{mm } -0.2\sim-0.3\text{mm}$ |
| Gobo I.D. (Max. Image Diameter) | $\text{Ø } 7\text{mm}$                         |
| Gobo Holder Diameter            | $\text{Ø } 14\text{mm } +0.2\sim+0.5\text{mm}$ |
| Gobo Thickness                  | $\text{Ø } 1.1\text{mm } \pm 0.1\text{mm}$     |
| Gobo Material                   | BOROFLOAT                                      |

**\* \* \* IMPORTANT NOTICE REGARDING CUSTOM GOBOS \* \* \***

Due to the high temperature optical system, special material as listed above is required for custom gobos. Due to varying manufacturing processes and tolerances, it is highly recommended to provide a gobo sample and holder from the fixture to the custom gobo vendor for accurate sizing. Extended testing of custom gobo designs is highly recommended prior to use. Contact ELATION SERVICE for further information.

**ELATION SERVICE USA - Monday - Friday 8:00am to 5:00pm PST**

Voice: 323-582-3322

Fax: 323-832-9142

E-mail: [support@elationlighting.com](mailto:support@elationlighting.com)

**ELATION SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET**

Voice: +31 45 546 85 30

Fax: +31 45 546 85 96

E-mail: [support@elationlighting.eu](mailto:support@elationlighting.eu)

# GOBO INSTALLATION



**WARNING! GOBO REPLACEMENT SHOULD ONLY BE DONE BY A TRAINED TECHNICIAN.**

1. Turn OFF power and allow approximately 60 minutes for the fixture to cool down.





2. Before removing panels, place fixture on a stable flat surface in an **INDOOR DUST FREE** location. Ensure moving head is locked into place into a neutral upright position, with both **PAN** and **TILT** locks engaged.





3. Remove front and back panels; each are secured with (6x) 3mm hex-head screws.

# GOBO INSTALLATION

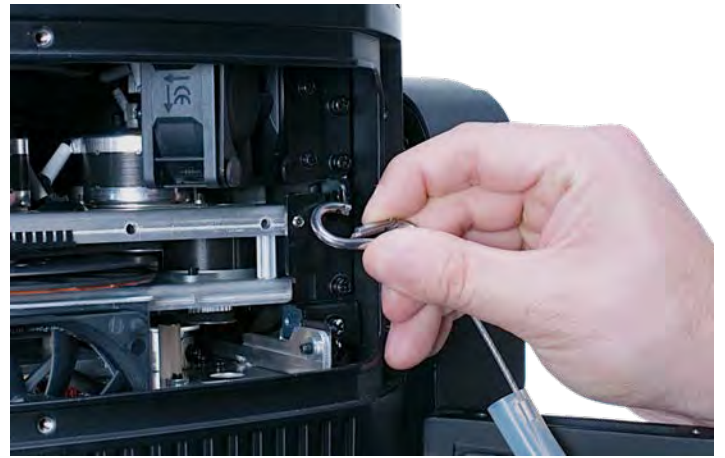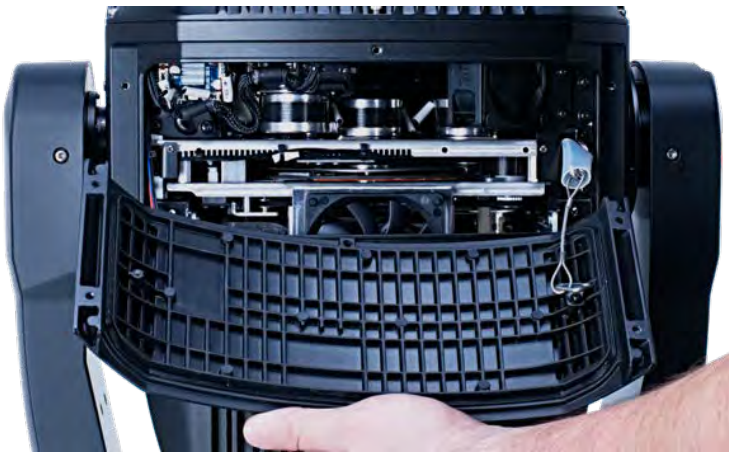

4. One at a time, gently lift panels away and unclip the safety cable to remove them completely from the fixture.

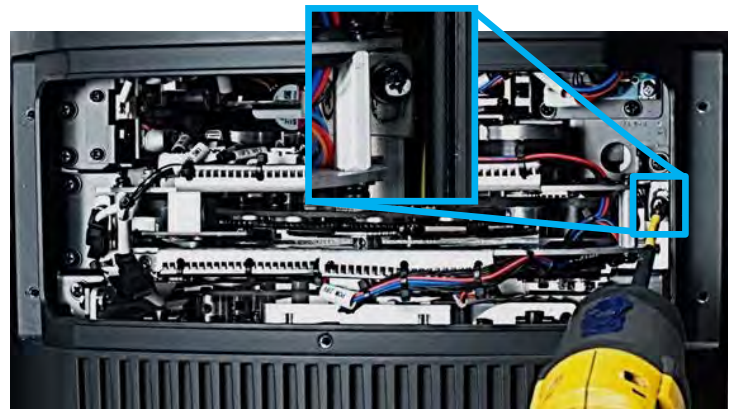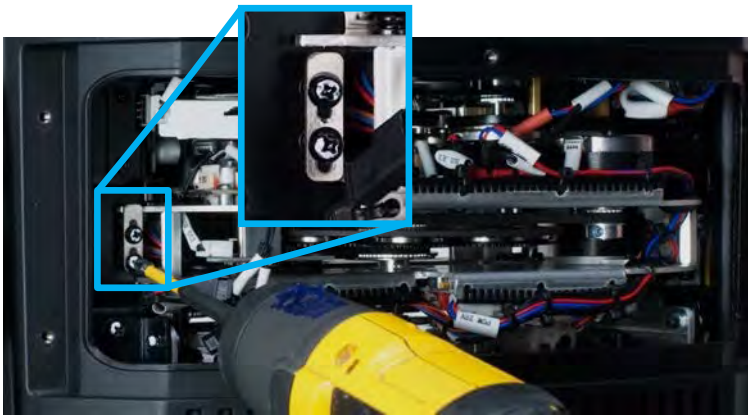


5. Loosen (3x) Phillips head screws securing the GOBO Wheel Module brackets, allowing them to slide freely.


# GOBO INSTALLATION

6. Before removing the GOBO Wheel Module, locate the 4 wire connectors and carefully unplug them. (See connectors in photos 6a, 6b, 6c, and 6d) **DO NOT USE FORCE TO REMOVE!**


6a

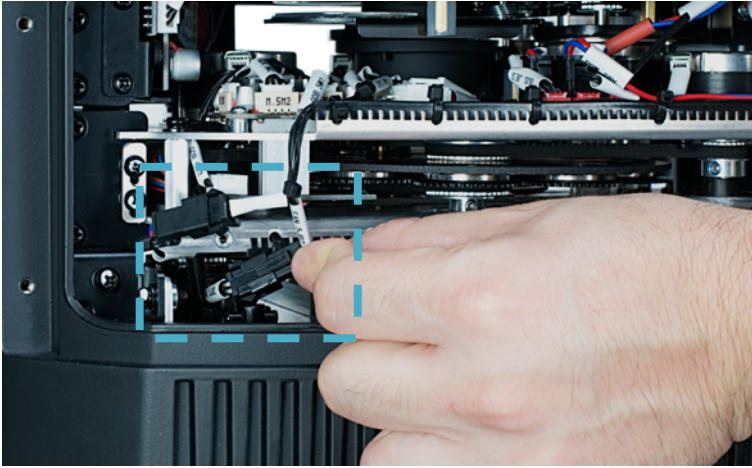


6b

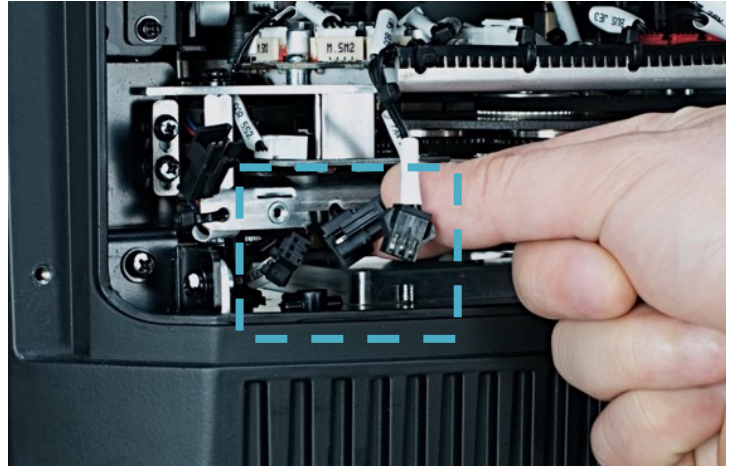



6c

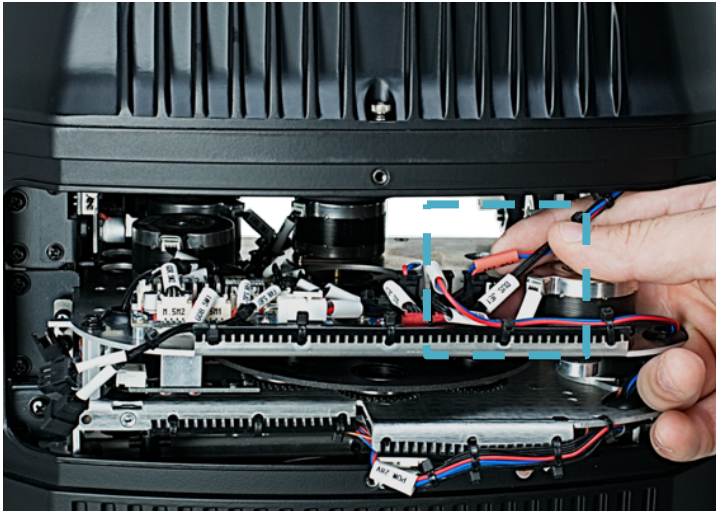

6d

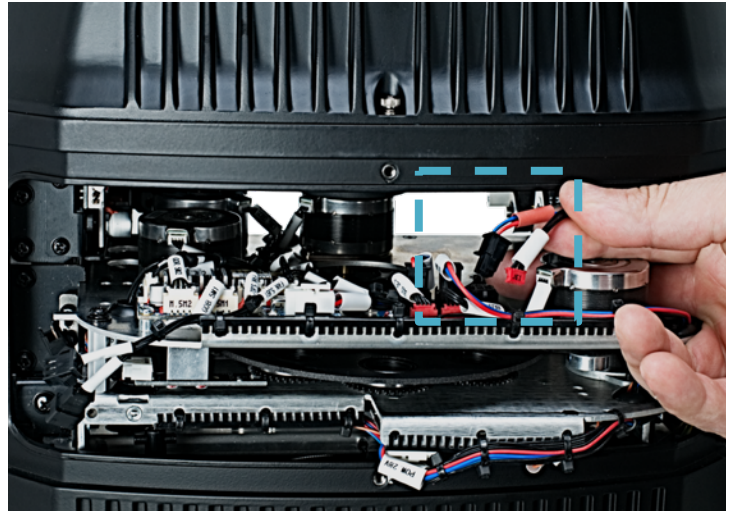


# GOBO INSTALLATION

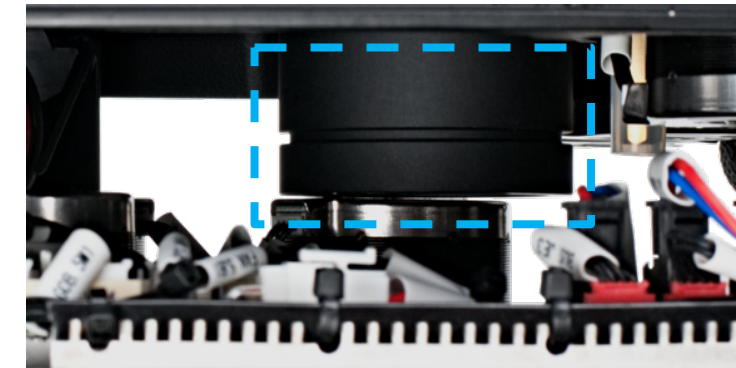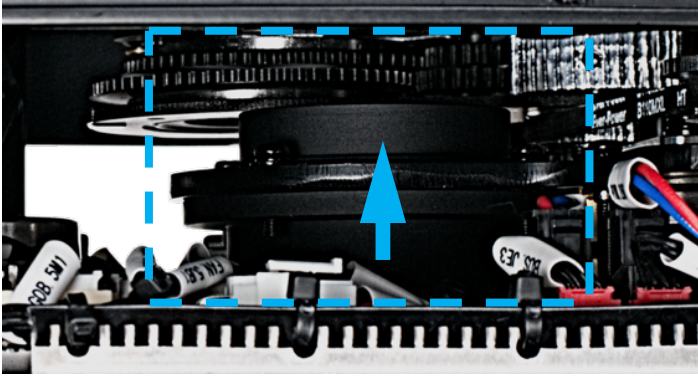

7. Lift/Push the Lens to clear GOBO Wheel Module. If it is difficult to access the Lens, it may be necessary to tilt the head over, allowing gravity to slide the Lens out of the way.




8. Carefully grip the GOBO Wheel Module and slide it out and away to clear the mounting rails.

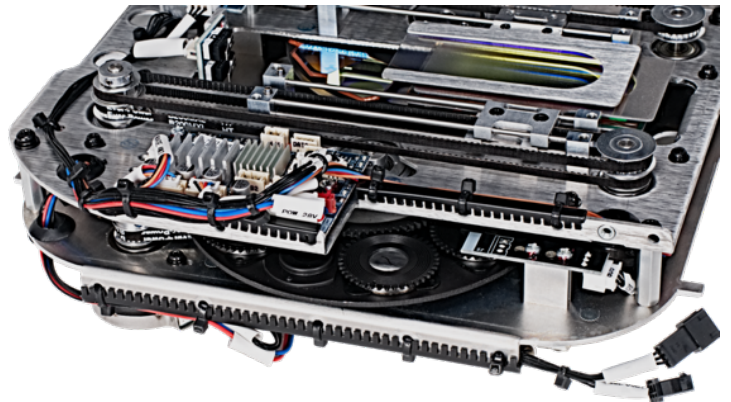

9. Carefully place the GOBO Wheel Module on a stable flat surface in an **INDOOR DUST FREE** location.



# GOBO INSTALLATION

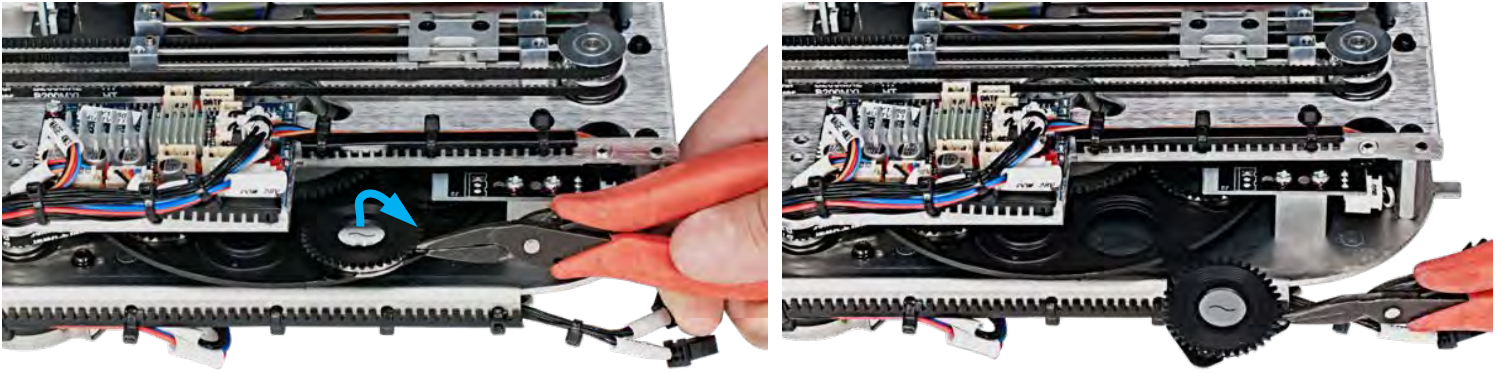

## 10. REPLACING A ROTATING GOBO

Carefully lift the GOBO Holder up and out from the GOBO Wheel using small needle nose pliers. Take care not to scratch the GOBO and GOBO Holder when removing it from the GOBO Wheel Module.



11. Locate the tab of the retaining spring. Using a precision pick (or similar tool), carefully press the retaining spring inward to relieve the tension. Remove the retaining spring and carefully separate the GOBO from the GOBO Holder. Install the replacement GOBO following the steps above in reverse order.



**CAUTION: TAKE CARE NOT TO SCRATCH GOBO OR GOBO HOLDER**

# GOBO INSTALLATION

## GASKET INSPECTION



CAREFULLY REMOVE ANY DEBRIS FOUND ON GASKET AND SCREW HOLES OF BOTH CENTER PANELS USING A NONABRASIVE BRUSH BEFORE INSTALLING!

CAREFULLY INSPECT GASKETS FOR SIGNS OF WEAR SUCH AS CRACKING OR HARDENING, DEFORMITIES, OR ALIGNMENT ISSUES BEFORE INSTALLING!

ITEMS ABOVE CAN IMPEDE THE IP65 INTEGRITY AND/OR CAUSE INTERNAL DAMAGE. CONTACT ELATION SERVICE REGARDING GASKET REPLACEMENT IF NEEDED.



# TORQUE SETTINGS FOR SCREWS

## TORQUE SETTINGS FOR PANEL SCREWS



**PANEL SCREWS MUST BE TIGHTED WITH A TORQUE WRENCH!**



The (12x) hex-head screws holding the panels **MUST** be tightened with a torque wrench (not included).

**TORQUE SETTING = 11 lbf-in. (12.7kgf-cm) \***

**\* lbf-in = Pound Force Inches | kgf-cm = Kilogram Force Centimeters**

# TORQUE SETTINGS FOR SCREWS



**CAUTION! DO NOT OVER TORQUE SCREWS AS THIS CAN CAUSE LEAKAGE ISSUES! TO CONFIRM THE IP65 INTEGRITY AFTER A GOBO REPLACEMENT, TEST FIXTURE USING THE ELATION IP TESTER. CONTACT ELATION SERVICE FOR MORE DETAILS.**



**CAUTION! THE USE OF PROTECTIVE GLOVES AND SAFETY GOGGLES IS STRONGLY RECOMMENDED WHILE PERFORMING THE IP PRESSURE TEST! AVOID PLACING YOUR FACE, EYES, HANDS, ETC IN CLOSE PROXIMITY TO THE FIXTURE'S LENS WHILE**



| <b>IP PRESSURE TESTING PARAMETERS</b> |                           |                            |                  |
|---------------------------------------|---------------------------|----------------------------|------------------|
| <b>Test Type</b>                      | <b>Low Pressure Limit</b> | <b>High Pressure Limit</b> | <b>Hold Time</b> |
| Vacuum Test                           | -4.35 psi<br>(-30.00 KPa) | -5.08 psi<br>(-35.00 KPa)  | 10 sec           |
| Pressure Test                         | 3.62 psi<br>(25.00 KPa)   | 4.35 psi<br>(30.00 KPa)    | 10 sec           |

# LAMP REPLACEMENT

To ensure a proper/safe lamp change, carefully read all the following instructions.

**USE ONLY GENUINE ORIGINAL PHILIPS™ LAMPS. OTHER BRAND LAMPS WILL CAUSE DAMAGE AND WILL VOID FIXTURE WARRANTY!**



**DISCONNECT THE MAIN POWER SUPPLY BEFORE REPLACING LAMP!  
FIXTURE MUST COOL FOR 60 MINUTES BEFORE REPLACING LAMP!  
NEVER TOUCH LAMP WITH BARE HANDS, ALWAYS WEAR GLOVES!  
OIL FROM HANDS WILL SHORTEN LIFE OF LAMP!**

**MAKE SURE ALL COVERS/PANELS ARE REPLACED/SECURED BEFORE OPERATING FIXTURE TO PREVENT ANY RISK AND/OR DAMAGE TO EYE RETINA FROM UV RADIATION EXPOSURE!**

## LAMP PROTECTION CIRCUITRY

The fixture LCD Menu Control Display will indicate the lamp life and related lamp warnings with each power ON, each lamp strike, and when specific lamp hours are reached. The table below provides details on each lamp life warning. Due to the extreme heat associated with the lamp and the nature of the internal optical system, it is **IMPERATIVE** the lamp is replaced when the LCD Menu Control Display indicates replacement is needed. This is done to protect the internal optical system as well as prevent accidental lamp explosion, which could lead to hot glass particles falling from the fixture.

### **Total Lamp Hours = X – 20%**

LCD display will slowly blink with a YELLOW outline and the following warning for 10 mins:

**“LAMP LIFE left “X” hours. Please change lamp soon”**

Sending a DMX value of 250-251 in Channel 24 (Standard Mode) or Channel 34 (Extended Mode) from the lighting controller or pressing the OK button on the fixture control panel will clear this warning.

### **Total Lamp Hours = X up to X + 20%**

LCD display will slowly blink with a RED outline and the following warning for 10 mins:

**“LAMP LIFE exceeded by “X” hours. Please change lamp immediately”**

Sending a DMX value of 250-251 in Channel 24 (Standard Mode) or Channel 34 (Extended Mode) from the lighting controller or pressing the OK button on the fixture control panel will clear this warning.

### **Total Lamp Hours = X + 20% and higher**

LCD display will slowly blink RED Outline and the following warning:

**“Lamp Life “X” hours. Danger of lamp explosion and permanent fixture damage. Replace lamp immediately! User assumes all risks”**

This error can ONLY be cleared when the lamp hours are reset.

# LAMP REPLACEMENT



**LAMP LIFE OF PHILIPS PLATINUM 200 FLEX = UP TO 6,000 HOURS**

Lamp hours are calculated in real time by a smart algorithm combining periods of full output and periods of hibernation with the shutter closed. To reach 6,000 hours the fixture must be operated in average entertainment usage patterns that contain cycles of closed shutters to enter hibernation mode. On average this will allow to the fixture to reach 6,000 hours under common entertainment operation cycles as defined by Philips as 30% operation, 70% hibernation. In the rare case that the fixture Smarty would be turned on, shutter opened and never closed again the lamp life is 2000 hours. Lamp life idle, total time and an estimated total lamp life % are provided in the display of the fixture.

**WARNING! LAMP REPLACEMENT SHOULD ONLY BE DONE BY A TRAINED TECHNICIAN.**

1. Turn OFF power and allow approximately 60 minutes for the fixture to cool down.



2. Place head in a 90-degree horizontal position.

Engage **PAN and TILT** locks for added stability while replacing the lamp.

# LAMP INSTALLATION



3. Remove (4x) 3mm hex-head screws to remove the rear cover.



4. Unclip the rear panel safety cable.



5. Locate 2 wire connectors to the heatsink module.




6. Carefully unplug these two wire connectors.  
It may be necessary to use a precision pick or similar tool to gently unlock each connector.



**DO NOT USE FORCE TO REMOVE!**





## LAMP INSTALLATION

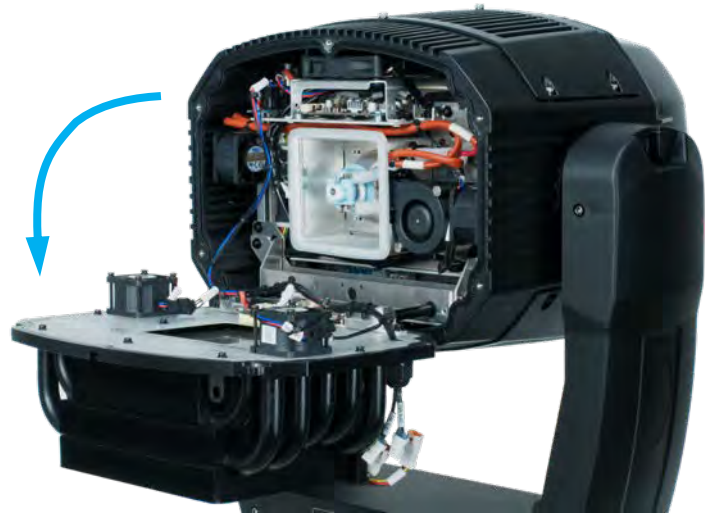

7. Remove (4x) 3mm hex-head screws holding the heatsink module. Carefully rotate heatsink module down 90° to rest on brackets. **DO NOT USE FORCE!**

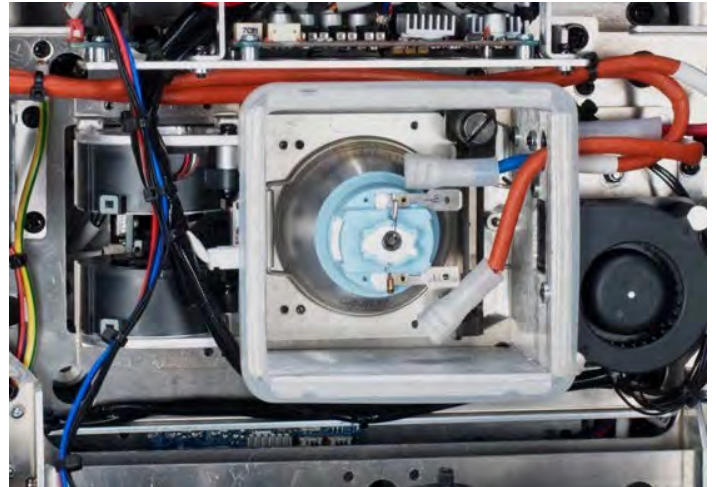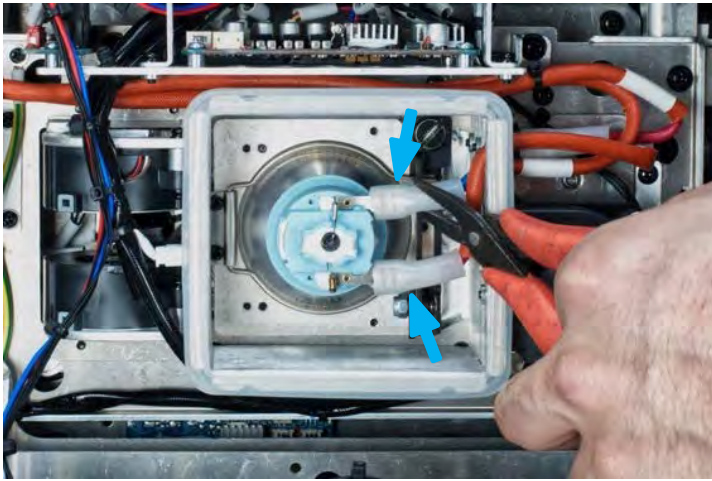



8. Gently remove the (2x) spade terminals connected to the lamp base.

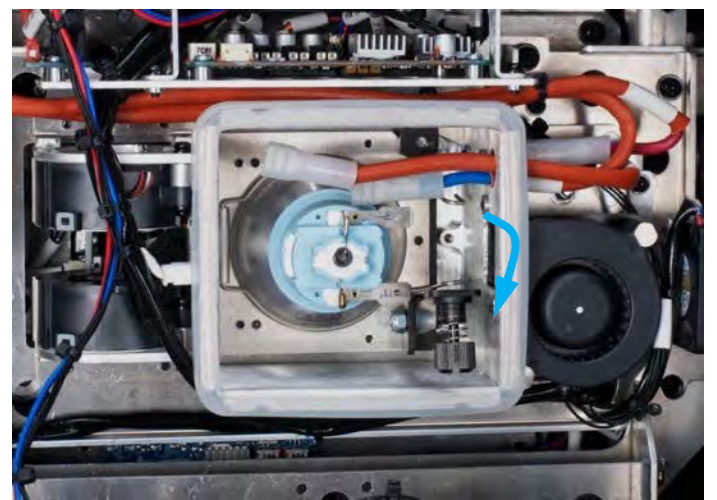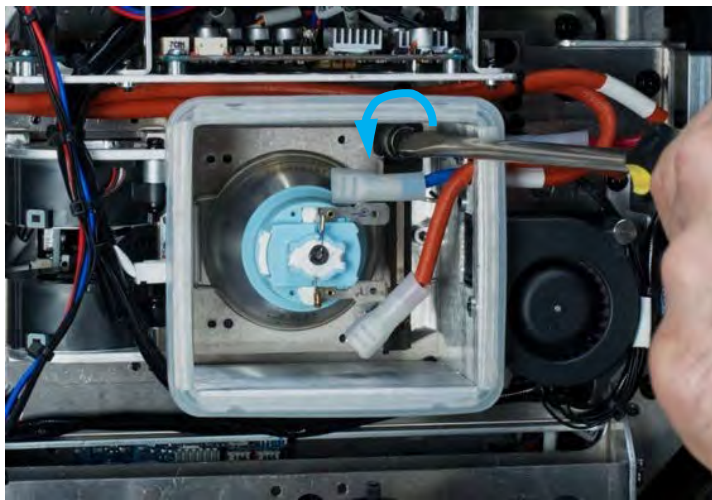


9. Loosen the lamp retaining arm screw and the pull arm out, then unclip the lamp retaining-clip.



## LAMP INSTALLATION

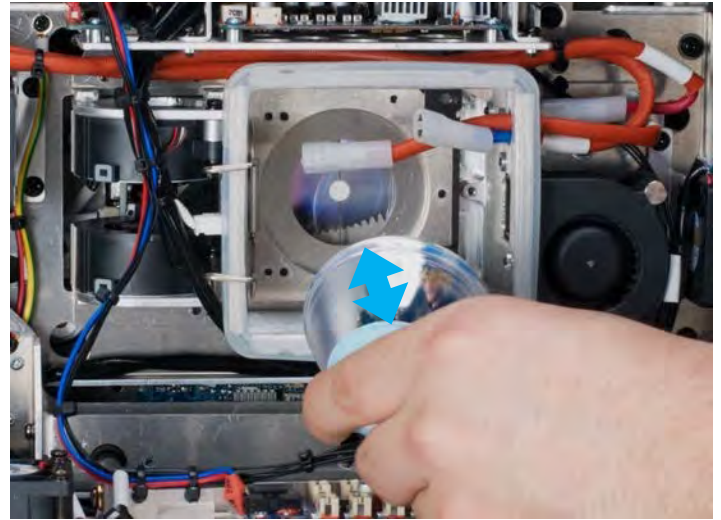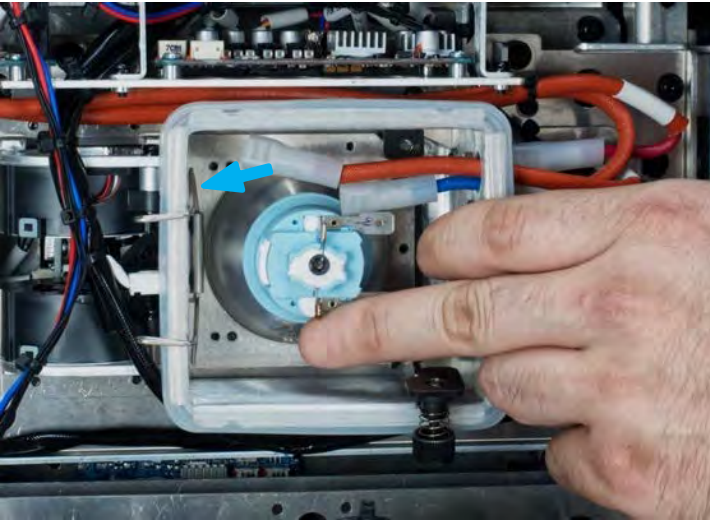

10. Swing the lamp retaining clip out, then carefully remove the lamp.

 **WARNING! LAMP MAY BE HOT. USE CAUTION WHEN TOUCHING LAMP WITH BARE HANDS.**


## GASKET INSPECTION



**CAREFULLY REMOVE ANY DEBRIS FOUND ON GASKET AND SCREW HOLES OF THE HEATSINK MODULE USING A NONABRASIVE BRUSH BEFORE INSTALLING!**

**CAREFULLY INSPECT HEATSINK GASKET FOR SIGNS OF WEAR SUCH AS CRACKING OR HARDENING, DEFORMITIES, OR ALIGNMENT ISSUES BEFORE INSTALLING!**

**ITEMS ABOVE CAN IMPEDE THE IP65 INTEGRITY AND/OR CAUSE INTERNAL DAMAGE. CONTACT ELATION SERVICE REGARDING GASKET REPLACEMENT IF NEEDED.**

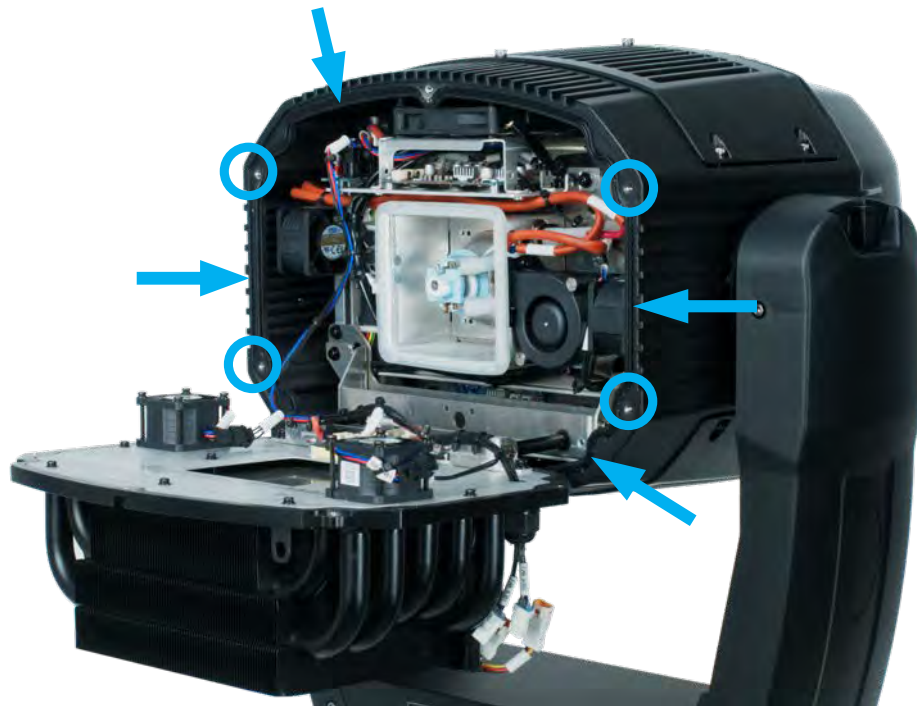

# INSTALLATION GUIDELINES



## FLAMMABLE MATERIAL WARNING

Keep fixture minimum 5.0 feet (1.5m) away from flammable materials and/or pyrotechnics.



## ELECTRICAL CONNECTIONS

A qualified electrician should be used for all electrical connections and/or installations.



**USE CAUTION WHEN POWER LINKING OTHER MODEL FIXTURES AS THE POWER CONSUMPTION OF OTHER MODEL FIXTURES MAY EXCEED THE MAX POWER OUTPUT ON THIS FIXTURE. CHECK SILK SCREEN FOR AMX AMPS.**



**MINIMUM DISTANCE TO OBJECTS/SURFACES  
MUST BE 49.2 FEET (15 METERS)**



**MINIMUM DISTANCE OF INFLAMMABLE MATERIALS  
FROM THE SURFACE 1.6 FEET (0.5 METER)**



**MAXIMUM TEMPERATURE OF EXTERNAL SURFACE 185° F (85°C)**



**DO NOT INSTALL THE FIXTURE IF YOU ARE NOT QUALIFIED TO DO SO!**

Fixture **MUST** be installed following all local, national, and country commercial electrical and construction codes and regulations.

Before rigging/mounting a single fixture or multiple fixtures to any metal truss/structure or placing the fixture(s) on any surface, a professional equipment installer **MUST** be consulted to determine if the metal truss/structure or surface is properly certified to safely hold the combined weight of the fixture(s), clamps, cables, and accessories.

Overhead rigging requires extensive experience, including amongst others calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the fixture. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

Fixture ambient operating temperature range is **14° to 113°F. (-10° to 45°C)**

Do not use the fixture under or above this temperature.

Fixture(s) should be installed in areas outside walking paths, seating areas, or away from areas where unauthorized personnel might reach the fixture by hand.

**NEVER** stand directly below the fixture(s) when rigging, removing or servicing.

Overhead fixture installation must always be secured with a secondary safety attachment, such as an appropriately rated safety cable.

Allow approximately 15 minutes for the fixture to cool down before serving.

# INSTALLATION GUIDELINES

## OMEGA BRACKETS INSTALLATION

Insert the Omega Brackets into the matching holes on the bottom of the fixture. Secure the Omega Brackets to the fixture by turning each quick-lock fastener ¼ turn clockwise; making sure the fastener is completely locked. Omega Brackets can be installed into the fixture base as illustrated below.



## CLAMP INSTALLATION

When mounting fixture to truss, be sure to secure an appropriately rated professional grade rigging clamp to the included **Omega Brackets** using an M10 screw fitted through the center hole of the **Omega Brackets**. The fixture provides a built-in rigging points for a **SAFETY CABLE**. Be sure to only use one of the designated rigging points for the safety cable and never secure a safety cable to a carrying handle.

## RIGGING

Overhead rigging requires extensive experience, including amongst others calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the fixture. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.



**ALWAYS ATTACH AN APPROPRIATELY RATED SAFETY CABLE (NOT INCLUDED) THAT MEETS ALL LOCAL, NATIONAL, AND COUNTRY CODES AND REGULATIONS WHENEVER INSTALLING FIXTURE IN A SUSPENDED ENVIRONMENT!**

## ART-NET | sACN CONNECTION

When connecting fixture to a network switch to control multiple devices, a **Gigabit Ethernet Switch** that supports **IGMP (Internet Group Management Protocol)** is required. Using a **Gigabit Ethernet Switch** that does not support **IGMP** can cause erratic behavior of all connected devices to the switch. Click link below for more information about IGMP.

[https://en.wikipedia.org/wiki/Internet\\_Group\\_Management\\_Protocol](https://en.wikipedia.org/wiki/Internet_Group_Management_Protocol)


# INSTALLATION GUIDELINES

## POWER AND DATA CABLES




TO MAINTAIN THE IP65 RATING INTEGRITY OF THE FIXTURE, ALL CABLES MUST BE RUN TOWARDS THE GROUND TO PREVENT WATER ACCUMULATION AROUND THE CONNECTIONS. (see illustration below)

## CONTROL PANEL LCD DISPLAY

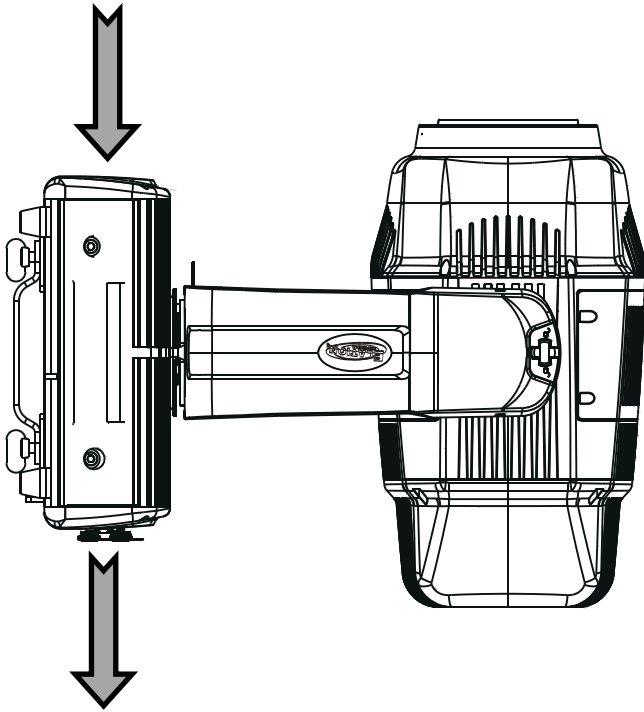

**CABLES**

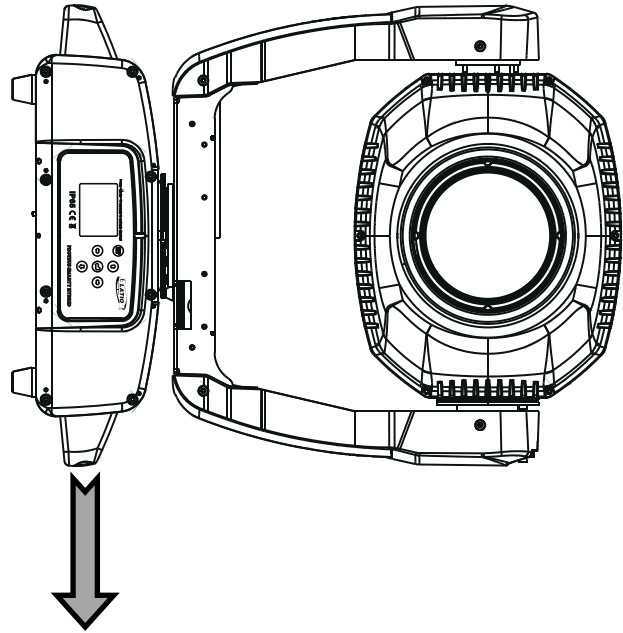

**CABLES**

# INSTALLATION GUIDELINES

## POWER AND DATA CONNECTIONS



ENSURE ALL CONNECTIONS AND END CAPS ARE PROPERLY SEALED WITH A DIELECTRIC GREASE (AVAILABLE AT MOST ELECTRICAL SUPPLIERS) TO PREVENT WATER CORROSION AND/OR ELECTRICAL SHORT CIRCUIT.



TO MAINTAIN IP65 RATING INTEGRITY AND PREVENT WATER FROM ENTERING THE FIXTURE, SEAL ALL UNUSED CONNECTION RUBBER CAPS.



### SAFETY CABLE RIGGING POINT




ALWAYS ATTACH A SAFETY CABLE WHENEVER INSTALLING THIS DEVICE IN A SUSPENDED ENVIRONMENT TO ENSURE THE FIXTURE WILL NOT DROP IF THE CLAMP FAILS.

# INSTALLATION GUIDELINES

## RIGGING

Overhead rigging requires extensive experience, including calculating working load limits, knowledge of installation material being used, and periodic safety inspection of all installation material and the fixture itself, among other skills. If you lack these qualifications, do not attempt installation of the fixture on your own. Improper installation can result in bodily injury. The fixture is fully operational in the specific mounting positions illustrated below:

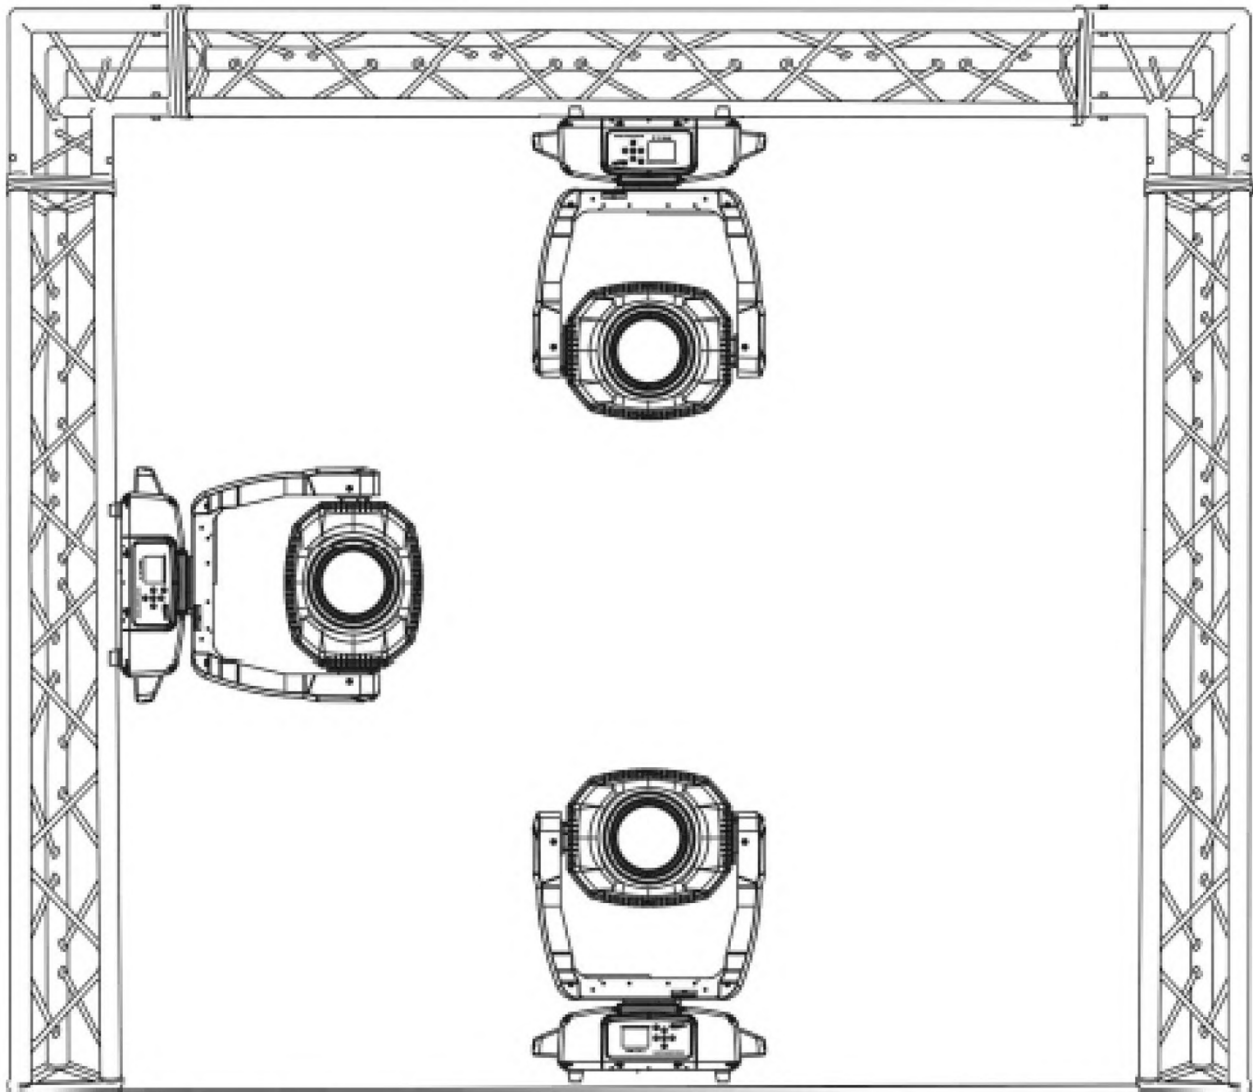


# INSTALLATION GUIDELINES

## POTENTIAL INTERNAL FIXTURE DAMAGE FROM EXTERNAL SOURCES OF LIGHT BEAMS

External sources of light beams from direct sunlight, lighting moving head fixtures, and lasers, which are focused directly on the exterior housing and/or penetrate the front lens opening of ELATION lighting fixtures, can cause severe internal damage including burning to optics, dichroic color filters, glass and metal gobos, prisms, animation wheels, frost filters, iris, shutters, motors, belts, wiring, discharge lamps, and LEDs.

This issue is not specific only to ELATION lighting fixtures, it is a common issue with lighting fixtures from all manufacturers. Although there is no true way to fully prevent this issue from happening, the guidelines below can prevent any potential damage from occurring if followed. Contact ELATION Service for more details.

**DO NOT EXPOSE THE FIXTURE AND/OR FRONT LENS OPENING TO LIGHT BEAMS FROM DIRECT SUNLIGHT, OTHER LIGHTING MOVING HEAD FIXTURES, AND LASERS WHILE UNPACKING, INSTALLATION, USE, AND EXTENDED IDLE TIMES OUTDOORS. DO NOT FOCUS A LIGHT BEAM FROM ONE LIGHTING FIXTURE DIRECTLY TOWARDS ANOTHER.**

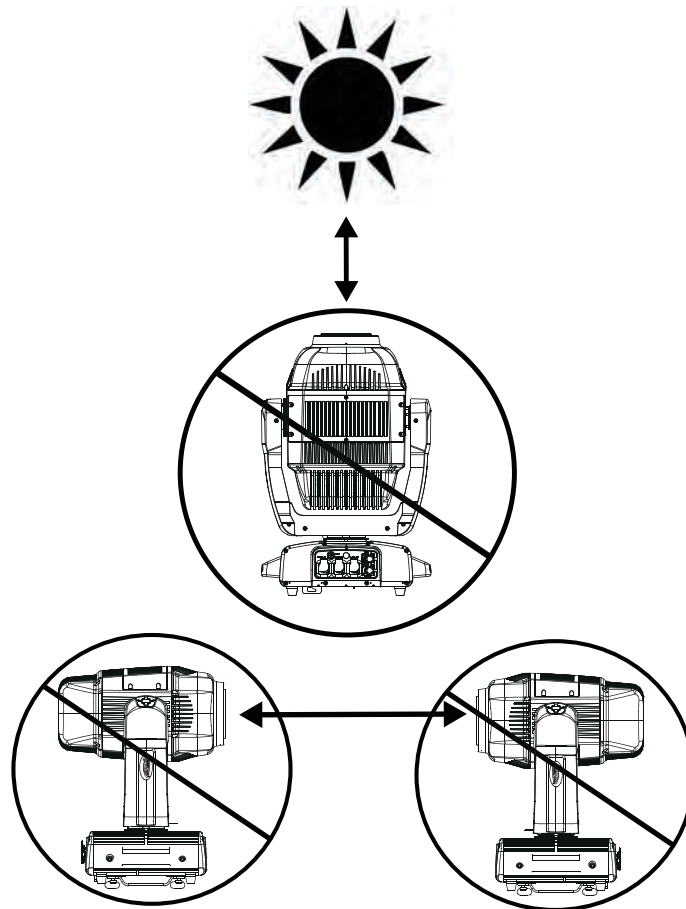

# INSTALLATION GUIDELINES

## HIBERNATION MODE

This mode disables motors and most electronics in order to reduce wear on the fixture's internal components. The user has the ability to define the period of time that the fixture can remain inactive before it enters hibernation mode. This feature can be accessed by navigating in the main menu to *PERSONALITY > STATUS SETTINGS > HIBERNATION* (see the **System Menu** section of this manual for detailed information). The default setting for hibernation delay time is 15 minutes, but it can be adjusted from 1 min to 99 min, or switched off completely.

Hibernation mode is activated under the following conditions:

- **Loss of DMX signal:** the fixture enters hibernation after the timeout expires. Default is 15 minutes.
- **Remote DMX control:** Press and hold "Hibernate Fixture" for 3s.

Hibernation mode is deactivated under the following conditions:

- **DMX signal is connected.**
- **Remote DMX control:** Hold "Hibernate Off" for 3s.

The fixture will perform a full calibration cycle, then assume the current DMX status.

Please note that the Hibernation does not change the PT position of the fixtures. This allows the user to set the desired position and then issue the Hibernate command.



# REMOTE DEVICE MANAGEMENT (RDM)

**NOTE:** In order for RDM to work properly, RDM enabled equipment must be used throughout the entire system, including DMX data splitters and wireless systems.

Remote Device Management (RDM) is a protocol that sits on top of the DMX512 data standard for lighting, allowing the DMX systems of the fixtures to be modified and monitored remotely. This protocol is ideal for instances in which a unit is installed in a location that is not easily accessible.

With RDM, the DMX512 system becomes bi-directional, allowing a compatible RDM enabled controller to send out a signal to devices on the wire, as well as allowing the fixture to respond (known as a *GET* command). The controller can then use its *SET* command to modify settings that would typically have to be changed or viewed directly via the unit's display screen, including the DMX Address, DMX Channel Mode, and Temperature Sensors.

## FIXTURE RDM INFORMATION:

| RDM Code | Personality ID               |
|----------|------------------------------|
| 0x61E    | Standard (0)<br>Extended (1) |

**Please be aware that not all RDM devices support all RDM features,** and therefore it is important to check beforehand to ensure that the equipment that you are considering includes all of the features that you require.


The following parameters are accessible in RDM on this device:

|                             |
|-----------------------------|
| Sensor Definition           |
| Sensor Value                |
| Device Model Description    |
| Manufacturer Label          |
| Device Label                |
| DMX Personality             |
| DMX Personality Description |
| Device Hours                |
| Lamp Hours                  |
| Lamp State                  |
| Pan Invert                  |
| Tilt Invert                 |
| Display Invert              |

# SYSTEM MENU

The fixture includes an easy to navigate system menu. The control panel (see image below) located on the front of the fixture, provides access to the main system menu and is where all necessary system adjustments are made to the fixture. During normal operation, pressing **MODE/ESC** button once will access the fixture's main menu. Once in the main menu you can navigate through the different functions and access the sub-menus with the **UP, DOWN, RIGHT,** and **LEFT** buttons. Once you reach a field that requires adjusting, press the **ENTER** button to activate that field and use the **UP** and **DOWN** buttons to adjust the field. Pressing the **ENTER** button once more will confirm your setting. You may exit the main menu at any time without making any adjustments by pressing the **MODE/ESC** button.

To access the LCD Menu Control Display via the internal battery, press and hold the **MODE/ESC** button for 10 seconds. The LCD Menu Control Display will shut **OFF** automatically about 1 minute from the last button press.

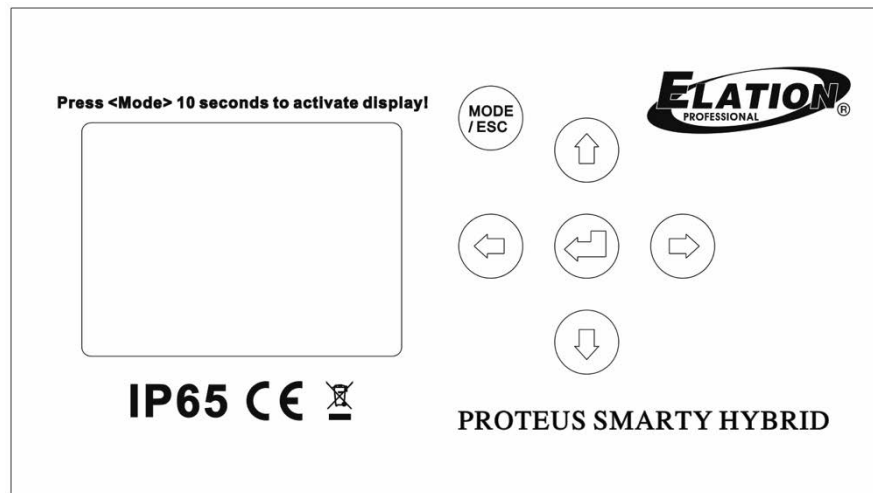

## ELATION PROTEUS SMARTY HYBRID SYSTEM MENU - Supports Software Versions: ≥ 1.1.3

Features are subject to change without notice.

\*Rotation direction (Clockwise or Counterclockwise) of effects depends on orientation of the fixture head and Pan/Tilt settings.

| MAIN MENU        | SUB MENU   | OPTIONS / VALUES (Default Settings in <b>BOLD</b> )          | DESCRIPTION  |                        |
|------------------|--|--|--|------------------------|
| FUNCTION         | Set Dmx Address  | A001~AXXX  | DMX Address Setting  |                        |
|                  | Dmx Value  | ALL.....   | DMX Value Display  |                        |
|                  | Secondary Mode   | Secondary1, Secondary2, Secondary3                           | Secondary Setting  |                        |
|                  | Auto Program   | Primary / <b>Alone</b>                                       | Auto Program   |                        |
| INFORMATION      | Time Information   | Current Time   | xxxx(Hours)      Fixture Run Time From Power ON                  |                        |
|                  |  | Total Run Time   | xxxx (Hours)      Fixture Total Run Time                         |                        |
|                  |  | Last Run Time  | xxxx (Hours)      Fixture Last Run Time                          |                        |
|                  |  | Lamp Time Info   | Total Time xxxx (Hours)  | Total Lamp Time Usage  |
|                  |  |  | Active Time xxxx (Hours)   | Active Lamp Time Usage |
|                  |  |  | Idle Time xxxx (Hours)   | Idle Lamp Time         |
|                  |  |  | Lamp Life (% Percent)  | Lamp Life              |
|                  |  | Lamp Off Time  | xxxx (Hours)      Lamp OFF Time                                  |                        |
|                  |  | LastRun Password   | Password= <b>038</b> <b>(PSWD Required)</b>                      |                        |
|                  |  | Clear Last Run   | ON / <b>OFF</b> Clear Fixture Last Run Time                      |                        |
|                  | LampTimePassword   | Password= <b>038</b> <b>(PSWD Required)</b>                  |  |                        |
|                  | Clear Lamp Time  | ON / <b>OFF</b> Clear Lamp Run Time                          |  |                        |
|                  | Temperature Info   | Base Temperature   | xxx C° / F°      Temperature in Fixture Base                     |                        |
|                  |  | Head Temperature   | xxx C° / F°      Temperature in Fixture Head                     |                        |
|                  |  | Lamp Temperature   | xxx C° / F°      Temperature of Lamp                             |                        |
|                  | Humidity Info  | Head Humidity  | xx%RH      Relative Humidity in Head                             |                        |
|                  |  | Base Humidity  | xx%RH      Relative Humidity in Base                             |                        |
|                  | Ethernet IP  | xxx . xxx . xxx . xxx      xxx . xxx . xxx . xxx             | Displays Fixture Ethernet Address                                |                        |
|                  | Fan Info   | xxxx RPM   | Speeds of Head/Base Fans   |                        |
|                  | Encode Info  | PAN: xxxx TILT:xxxx  | PAN and TILT Encode Info   |                        |
| Software Version | 1U01: - 10U01:      ≥ <b>V1.1.3</b>  | Software Version   |  |                        |
| Error Info       | Error Record 1 ~ Error Record 10   | Fixture Last 10 Error Codes                                  |  |                        |
| LAMP CONTROL     | Lamp On/Off  | <b>ON/OFF</b>  | Lamp ON/OFF  |                        |
|                  | Automatic On   | <b>ON/OFF</b>  | Lamp ON/OFF when Power ON  |                        |
|                  | Lamp On via DMX  | <b>ON/OFF</b>  | Lamp ON via DMX  |                        |
|                  | Lamp Off via DMX   | <b>ON/OFF</b>  | Lamp OFF via DMX   |                        |
|                  | MaxOnAtHumidity  | <b>070%</b> . 020% - 100%                                    | Fixture Restart at Humidity %                                    |                        |
|                  | Lamp Power Mode  | 190W, 240W, <b>280W</b>                                      | Lamp Power Mode  |                        |
| PERSONALITY      | Status Settings  | Address via DMX  | <b>ON/OFF</b> Address Via DMX                                    |                        |
|                  |  | No DMX Status  | Close / <b>Hold</b> / Auto      Fixture State When NO DMX Signal |                        |
|                  |  | Pan Reverse  | <b>ON/OFF</b> Pan Reverse Movement                               |                        |
|                  |  | Tilt Reverse   | <b>ON/OFF</b> Tilt Reverse Movement                              |                        |
|                  |  | Pan Degree   | 630/ <b>540</b> Pan Degree Select                                |                        |
|                  |  | Feedback   | <b>ON/OFF</b> Movement Feedback                                  |                        |
|                  |  | Hibernation  | OFF, 01M~99M, <b>15M</b> Stand By Mode                           |                        |
|                  | Service Setting  | Password   | Password= <b>050</b> Service Password                            |                        |
|                  |  | RDM UID  | <b>22A6xxxxxxx</b> RDM PID Code <b>(PSWD Required)</b>           |                        |
|                  |  | Clear Err. Info  | <b>ON/OFF</b> Clear Error Info <b>(PSWD Required)</b>            |                        |
|                  |  | DFLT Pow. LampOn   | <b>ON/OFF</b> Set Lamp Default Power State to ON                 |                        |
|                  | Display Setting  | Shutoff Time   | 02~60m <b>05m</b> Display Shut Off Time                          |                        |
|                  |  | Display Reverse  | <b>AUTO</b> , ON, OFF      Display Reverse 180°                  |                        |
|                  |  | Key Lock   | <b>ON/OFF</b> Key Lock   |                        |
|                  | Temperature C/F  | Celsius/ <b>Fahrenheit</b> Temperature Switch Between C°/ F° |  |                        |
|                  | Initial Status   | PAN =XXX      Initial Effect Position                        |  |                        |
|                  | Select Signal  | DMX Only, Art-Net, sACN      Activate DMX, Art-Net, or sACN  |  |                        |
|                  | Ethernet IP  | XXX . XXX . XXX . XXX      Ethernet IP                       |  |                        |
|                  | Ether Mask IP  | XXX . XXX . XXX . XXX      Ethernet Mask IP                  |  |                        |
|                  | Set Universe   | <b>000</b> - 32767      Set Art-Net Universe                 |  |                        |
| Reset Default    | <b>ON/OFF</b> Password= <b>011</b> Restore Factory Settings <b>(PSWD Required)</b> |  |  |                        |

**ELATION SMARTY HYBRID SYSTEM MENU - Supports Software Versions: ≥ 1.1.3**

Features subject to change without notice.

\*Rotation direction (Clockwise or Counterclockwise) of effects depends on orientation of the fixture head and Pan/Tilt settings.

| MAIN MENU       | SUB MENU         | OPTIONS / VALUES (Default Settings in <b>BOLD</b> ) |                  | DESCRIPTION   |                                   |
|-----------------|------------------|---|------------------|---|-----------------------------------|
| Reset Function  | Reset All        |   |                  | Reset All Motors  |                                   |
|                 | Reset Pan&Tilt   |   |                  | Reset Pan/Tilt  |                                   |
|                 | Reset Colors     |   |                  | Reset Color Wheel   |                                   |
|                 | Reset Gobos      |   |                  | Reset Gobos   |                                   |
|                 | Reset Shutter    |   |                  | Reset Shutter   |                                   |
|                 | Reset Others     |   |                  | Reset Other Motors  |                                   |
| Effect Adjust   | Test Channel     | PAN .....   |                  | Test function   |                                   |
|                 | Manual Control   | PAN =XXX, .....                                     |                  | Fine Adjustments  |                                   |
|                 | Calibration      | Calibration Password                                |                  | Password <b>050 (PSWD Required)</b>                             |                                   |
| User Mode Set   | User Mode        | <b>Standard Mode</b>                                |                  | DMX Channel Modes<br><br>Edits User Defined Channel Assignments |                                   |
|                 |                  | Extended Mode                                       |                  |   |                                   |
|                 | Edit User Mode   | Edit User Mode A                                    | Max Channel = XX |   | PAN = CH01                        |
|                 |                  | Edit User Mode B                                    |                  |   |                                   |
|                 | Edit User Mode C |   |                  |   |                                   |
| Edit Program    | Select Program   | Auto Pro Part1 = Program 1~10 ( <b>Program 1</b> )  |                  | Select Programs To Be Run                                       |                                   |
|                 |                  | Auto Pro Part2 = Program 1~10 ( <b>Program 2</b> )  |                  |   |                                   |
|                 |                  | Auto Pro Part3 = Program 1~10 ( <b>Program 3</b> )  |                  |   |                                   |
|                 | Edit Program     | Program 1   | Program Test     |   | Testing Program                   |
|                 |                  | :   | Step 01=SCxxx    |   | Program In Loop                   |
|                 |                  | Program 10  | Step 64=SCxxx    |   | Save and Exit                     |
|                 | Edit Scenes      | Edit Scene 001<br>~<br>Edit Scene 250               | Pan,Tilt,.....   |   | Save and Automatically Return     |
|                 |                  |   | --Fade Time--    |   | Manual Scenes Edit                |
|                 |                  |   | --Scene Time--   |   |                                   |
|                 |                  |   | Input By Outside |   | Stores Scenes via Ext DMX Console |
| Rec. Controller |                  | XX~XX   |                  | Automatic Scenes Recorder                                       |                                   |

**Please note: An Elation E-Loader III can be used to update the fixture to the latest software. To order this device, please contact Elation support for further details.**

# SYSTEM MENU

## PERSONALITY - Status Settings - Address Via DMX

When ON, define the desired DMX address via an external controller.

NOTE: This process assumes the fixture DMX address is set to 001. If fixture DMX address is not at 001, you must adjust the channel numbers accordingly in order for this feature to work.

For example: if your fixture address is 010, then Channel 1 becomes Channel 10, Channel 2 becomes Channel 11, and Channel 3 becomes Channel 12.

1. Connect the fixture to the external controller and power ON.
2. Set the DMX value of **Channel 1** on the controller to **(7)**.
3. Set the DMX value of **Channel 2** on the controller to **(7)** or **(8)**.  
When set to **(7)**, the DMX address can be set between **(1)** and **(255)**.  
When set to **(8)**, the DMX address can be set between **(256)** and **(511)**.
4. Using **Channel 3** on the controller set the desired DMX address of the fixture.

**Example 1:** If the desired DMX address is **57**, set **Channel 1** to a value of **(7)**, set **Channel 2** to a value of **(7)**, and then set **Channel 3** to a value of **(57)**.

**Example 2:** If the desired DMX address is **420**, set **Channel 1** to a value of **(7)**, set **Channel 2** to a value of **(8)**, and then set **Channel 3** to a value of **(164)**. ( $256+164=420$ )

5. After setting **Channel 3** to the desired DMX address value, wait for approximately 20 seconds (some fixtures may require a longer time) for the fixture to complete the address reset function.

## PERSONALITY – Service Setting - Password (050)

The Service Password MUST be entered in order to access the service menus.

# SYSTEM MENU

## **PERSONALITY - Display Setting – Key Lock**

When ON, Control Panel buttons lock automatically after exiting main menu for 15 seconds. To unlock, keep **MODE/ESC** button pressed for 3 seconds.

## **PERSONALITY - Reset Default**



**ONLY QUALIFIED TECHNICIANS SHOULD PERFORM THIS FUNCTION!**

This function restores all fixture settings to the factory default settings. The password is **011** and must be entered each time a reset is performed.

## **EFFECT ADJUST – Test Channel**

Auto test each individual channel function independently from the DMX control board.

## **EFFECT ADJUST – Manual Control**

Select and manually test and fine adjust each individual channel function independently from DMX control board. This function will center PAN and TILT motors and set dimmer to 100%. PAN and TILT functions will still operate if the fixture needs to be positioned to a flat clear surface. With the individual functions, you can focus the light on a flat surface (wall) and perform fine adjustments.

## **EFFECT ADJUST – Calibration**



**ONLY QUALIFIED TECHNICIANS SHOULD PERFORM THIS FUNCTION!**

This function allows small adjustments to be made to the Pan, Tilt, and Zoom movements to compensate for wear or in the event a sensor has been knocked slightly out of place. Because improper use of this function can result in undesired operation this function has been password protected. The password is **050** and must be entered each time the calibration menu function is entered. Because calibration is an extremely delicate procedure, instructions on performing this action are left out of this manual. For a first-time calibrator, please contact our customer support team for step-by-step instructions.


# SYSTEM MENU

## EDIT PROGRAM – Rec. Controller

The fixture features an integrated DMX-recorder by which you can transmit the programmed scenes from your DMX-controller to the moving head. Adjust the desired scene numbers via the encoder (from – to). When you call up the scenes at your controller, they will automatically be transmitted to the moving head.

## EDIT PROGRAM – Record Controller – Working with Built-In Programs

A Primary unit can send up to 3 different data groups to the Secondary units, i.e. a Primary unit can start 3 different Secondary units, which run 3 different programs. The Primary unit sends the 3 program parts in a continuous loop.

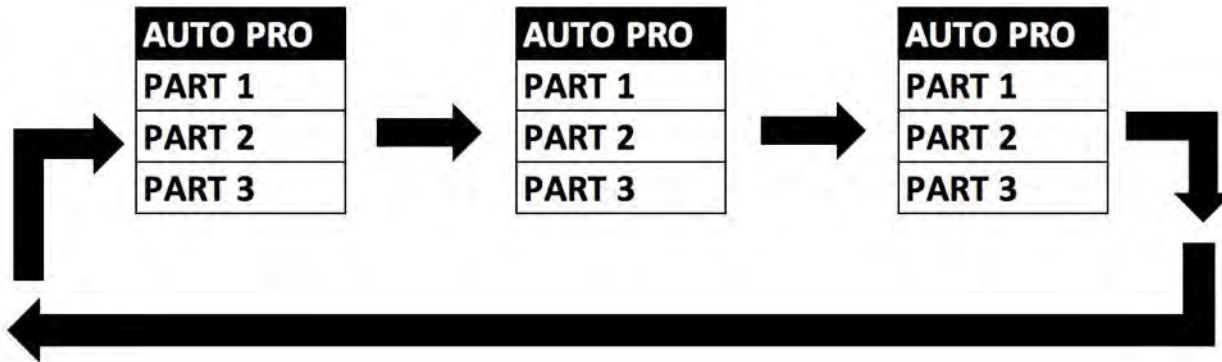

The Secondary unit receives data from the Primary unit according to the group which the Secondary unit was assigned to. If e.g. a Secondary unit is set to “**Secondary 1**” in the menu “**Set to Secondary**”, the Primary unit sends “**Auto Program Part 1**” to the Secondary unit.

If set to “**Secondary 2**”, the Secondary unit receives “**Auto Program Part 2**”.

# SYSTEM MENU

## EDIT PROGRAM – Record Controller – Working with Built-In Program [continued]

To start an Auto Program, proceed as follows:

### 1. Secondary Setting

Select “**Function Mode**”.

Press **ENTER** to confirm.

Select “**Set to Secondary**”.

Press **ENTER** to confirm.

Select “**Secondary 1**”, “**Secondary 2**” or “**Secondary 3**”.

Press **ENTER** to confirm.

Press **MODE/ESC** in order to return to the main menu.

### 2. Automatic Program Run

Select “**Function Mode**”.

Press **ENTER** to confirm.

Select “**Auto Program**”.

Press **ENTER** to confirm.

Select “**Primary**” or “**Alone**”.

Press **ENTER** to confirm.

Press **MODE/ESC** in order to return to the main menu.

### 3. Program Selection for Auto Pro Part

Select “**Edit Program**”.

Press **ENTER** to confirm.

Select “**Select Programs**”.

Press **ENTER** to confirm.

Select “**Auto Pro Part 1**”, “**Auto Pro Part 2**” or “**Auto Pro Part 3**” and select which Secondary program is to be sent. Selection “**Part 1**” means, that the Secondary unit runs the same program as the primary units.

Press **ENTER** to confirm.

Press **MODE/ESC** in order to return to the main menu.

### 4. Program Selection for Edit Program

Select “**Edit Program**”.

Press **ENTER** to confirm.

Select “**Edit Program**”.

Press **ENTER** to confirm.

Select the desired program to edit specific scenes into a specific program.

Press **ENTER** to confirm.

Press **MODE/ESC** in order to return to the main menu.



# SYSTEM MENU

## EDIT PROGRAM – Record Controller – Working with Built-In Program [continued]

### 5. Automatic Scene Recording

Select “**Edit Program**”.

Press **ENTER** to confirm.

Select “**Edit Scenes**”.

Select desired scene numbers. A maximum of 250 scenes can be programmed.

Press **ENTER** to confirm.

Press **MODE/ESC** in order to return to the main menu.

#### Example:

Program 2 includes scenes: 10, 11, 12, & 13

Program 4 includes scenes: 8, 9, & 10


Program 6 includes scenes: 12, 13, 14, & 15

Auto Pro Part 1 is Program 2

Auto Pro Part 2 is Program 3

Auto Pro Part 3 is Program 6

The 3 Secondary groups run the Auto Program in certain time segments. (See chart below)

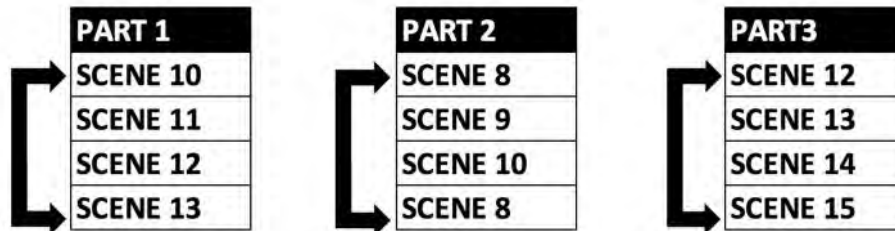

# DMX CHANNEL FUNCTIONS AND VALUES

| <b>RELATION PROTEUS SMARTY HYBRID™</b>   |                 |              |                                      |
|--|-----------------|--------------|--------------------------------------|
| DMX Channel Values / Functions (34 DMX Channels)   |                 |              |                                      |
| <b>Supports Software Versions: ≥ 1.1.3</b>   |                 |              |                                      |
| Features are subject to change without any prior written notice.<br>*Rotation direction (Clockwise or Counterclockwise) of effects depends on orientation of the fixture head and Pan/Tilt settings. |                 |              |                                      |
| <b>MODE / CHANNEL</b>  |                 | <b>VALUE</b> | <b>FUNCTION</b>                      |
| <b>STANDARD</b>  | <b>EXTENDED</b> |              |                                      |
| 1  | 1               |              | <b>PAN MOVEMENT</b>                  |
|  |                 | 0-255        | PAN Movement                         |
| 2  | 2               |              | <b>PAN FINE MOVEMENT FINE</b>        |
|  |                 | 0-255        | Fine 16-bit Control of PAN Movement  |
| 3  | 3               |              | <b>TILT MOVEMENT</b>                 |
|  |                 | 0-255        | TILT Movement                        |
| 4  | 4               |              | <b>TILT MOVEMENT</b>                 |
|  |                 | 0-255        | Fine 16-bit Control of TILT Movement |
| 5  | 5               |              | <b>CYAN COLOR</b>                    |
|  |                 | 0-255        | 0-WHITE ~ 255-100% CYAN              |
|  | 6               |              | <b>CYAN COLOR FINE</b>               |
|  |                 | 0-255        | CYAN FINE 16-bit Adjustment          |
| 6  | 7               |              | <b>MAGENTA COLOR</b>                 |
|  |                 | 0-255        | 0-WHITE ~ 255-100% MAGENTA           |
|  | 8               |              | <b>MAGENTA COLOR FINE</b>            |
|  |                 | 0-255        | MAGENTA FINE 16-bit Adjustment       |
| 7  | 9               |              | <b>YELLOW COLOR</b>                  |
|  |                 | 0-255        | 0-WHITE ~ 255-100% YELLOW            |
|  | 10              |              | <b>YELLOW COLOR FINE</b>             |
|  |                 | 0-255        | YELLOW FINE 16-bit Adjustment        |

| MODE / CHANNEL |          | VALUE   | FUNCTION   |
|----------------|----------|---------|--|
| STANDARD       | EXTENDED |         |  |
| 8              | 11       |         | <b>COLOR WHEEL</b>   |
|                |          | 0-10    | OPEN / WHITE   |
|                |          | 11-19   | RED - [RGB = 255, 0, 0]  |
|                |          | 20-28   | GREEN - [RGB = 0, 255, 0]  |
|                |          | 29-37   | YELLOW - [RGB = 255, 255, 0]   |
|                |          | 38-46   | MAGENTA - [RGB = 255, 0, 255]  |
|                |          | 47-55   | ORANGE - [RGB = 255, 102, 0]   |
|                |          | 56-64   | AQUA - [RGB = 10, 148, 22]   |
|                |          | 65-73   | PINK - [RGB = 217, 89, 153]  |
|                |          | 74-82   | CYAN - [RGB = 53, 227, 227]  |
|                |          | 83-91   | QUAD COLOR<br>[R=163,8,8] [Y=242, 242,5] [B=11,71,212] [G=33,181,57] |
|                |          | 92-100  | CTB - [RGB = 134, 165, 227]  |
|                |          | 101-109 | UV - [RGB = 70, 19, 173]   |
|                |          | 110-118 | CTO - [RGB = 209, 154, 92]   |
|                |          | 119-127 | BLUE - [RGB = 0, 51, 255]  |
|                |          | 128-189 | *CW COLOR Rotation from FAST to SLOW                                 |
|                |          | 190-193 | NO Rotation  |
|                |          | 194-255 | *CCW COLOR Rotation from SLOW to FAST                                |
|                | 12       |         | <b>COLOR WHEEL FINE ADJUSTMENT</b>                                   |
|                |          | 0-255   | FINE 16-bit Adjustment of Color Wheel to Any Position                |

| MODE / CHANNEL |   | VALUE   | FUNCTION   |
|----------------|---|---------|--|
| STANDARD       | EXTENDED                                  |         |  |
| 9              | 13  |         | <b>ROTATING GOBOS, CONTINUOUS ROTATION [WHEEL 1]</b> |
|                |   | 0-10    | BEAM OPEN  |
|                |   | 11-21   | SPOT OPEN  |
|                |   | 22-31   | Rotate Gobo 1  |
|                |   | 32-41   | Rotate Gobo 2  |
|                |   | 42-51   | Rotate Gobo 3  |
|                |   | 52-61   | Rotate Gobo 4  |
|                |   | 62-71   | Rotate Gobo 5  |
|                |   | 72-81   | Rotate Gobo 6  |
|                |   | 82-91   | Rotate Gobo 7  |
|                |   | 92-101  | Rotate Gobo 8  |
|                |   | 102-112 | Shake SLOW to FAST Gobo 1                            |
|                |   | 113-123 | Shake SLOW to FAST Gobo 2                            |
|                |   | 124-134 | Shake SLOW to FAST Gobo 3                            |
|                |   | 135-145 | Shake SLOW to FAST Gobo 4                            |
|                |   | 146-156 | Shake SLOW to FAST Gobo 5                            |
|                |   | 157-167 | Shake SLOW to FAST Gobo 6                            |
|                |   | 168-178 | Shake SLOW to FAST Gobo 7                            |
|                |   | 179-189 | Shake SLOW to FAST Gobo 8                            |
|                |   | 190-221 | *CCW Gobo Wheel Rotation from FAST to SLOW           |
| 222-223        | RESERVED                                  |         |  |
| 224-255        | *CW Gobo Wheel Rotation from SLOW to FAST |         |  |
| 10             | 14  |         | <b>ROTATING GOBOS, INDEX ROTATION [WHEEL 1]</b>      |
|                |   | 0-127   | Gobo Indexing  |
|                |   | 128-189 | *CW Gobo Rotation from FAST TO SLOW                  |
|                |   | 190-193 | NO Rotation  |
|                |   | 194-255 | *CCW Gobo Rotation from SLOW to FAST                 |
|                | 15  |         | <b>ROTATING GOBOS, FINE INDEX ROTATION [WHEEL 1]</b> |
|                |   | 0-255   | Gobo Rotation FINE 16-bit Indexing                   |

| MODE / CHANNEL |  | VALUE   | FUNCTION   |
|----------------|--|---------|--|
| STANDARD       | EXTENDED                                   |         |  |
| 11             | 16   |         | <b>STATIC / FIXED GOBOS [GOBO WHEEL 2]</b>                 |
|                |  | 0-9     | OPEN   |
|                |  | 10-17   | Static / Fixed Gobo 1                                      |
|                |  | 18-25   | Static / Fixed Gobo 2                                      |
|                |  | 26-33   | Static / Fixed Gobo 3                                      |
|                |  | 34-41   | Static / Fixed Gobo 4                                      |
|                |  | 42-49   | Static / Fixed Gobo 5                                      |
|                |  | 50-57   | Static / Fixed Gobo 6                                      |
|                |  | 58-65   | Static / Fixed Gobo 7                                      |
|                |  | 66-73   | Static / Fixed Gobo 8                                      |
|                |  | 74-81   | Static / Fixed Gobo 9                                      |
|                |  | 82-89   | Static / Fixed Gobo 10                                     |
|                |  | 90-97   | Static / Fixed Gobo 11                                     |
|                |  | 98-105  | Static / Fixed Gobo 12                                     |
|                |  | 106-112 | Shake SLOW to FAST Gobo 1                                  |
|                |  | 113-119 | Shake SLOW to FAST Gobo 2                                  |
|                |  | 120-126 | Shake SLOW to FAST Gobo 3                                  |
|                |  | 127-133 | Shake SLOW to FAST Gobo 4                                  |
|                |  | 134-140 | Shake SLOW to FAST Gobo 5                                  |
|                |  | 141-147 | Shake SLOW to FAST Gobo 6                                  |
|                |  | 148-154 | Shake SLOW to FAST Gobo 7                                  |
|                |  | 155-161 | Shake SLOW to FAST Gobo 8                                  |
|                |  | 162-168 | Shake SLOW to FAST Gobo 9                                  |
|                |  | 169-175 | Shake SLOW to FAST Gobo 10                                 |
|                |  | 176-182 | Shake SLOW to FAST Gobo 11                                 |
|                |  | 183-189 | Shake SLOW to FAST Gobo 12                                 |
| 190-221        | *CW Gobo Wheel Rotation from FAST to SLOW  |         |  |
| 222-223        | RESERVED                                   |         |  |
| 224-255        | *CCW Gobo Wheel Rotation from SLOW to FAST |         |  |
|                | 17   |         | <b>STATIC / FIXED GOBOS, FINE INDEX ROTATION [WHEEL 2]</b> |
|                |  | 0-255   | Gobo Rotation FINE 16-bit Indexing                         |

| MODE / CHANNEL |                       | VALUE   | FUNCTION   |
|----------------|-----------------------|---------|--|
| STANDARD       | EXTENDED              |         |  |
| 12             | 18                    |         | <b>ROTATING PRISMS, PRISM / GOBO MACROS</b>        |
|                |                       | 0-31    | OPEN   |
|                |                       | 32-64   | 16-Facet PRISM                                     |
|                |                       | 65- 94  | 4-Facet Linear PRISM                               |
|                |                       | 95- 127 | 16 + 4 Facet PRISMS COMBINED                       |
|                |                       | 128-135 | Prism / Gobo Macro 1                               |
|                |                       | 136-143 | Prism / Gobo Macro 2                               |
|                |                       | 144-151 | Prism / Gobo Macro 3                               |
|                |                       | 152-159 | Prism / Gobo Macro 4                               |
|                |                       | 160-167 | Prism / Gobo Macro 5                               |
|                |                       | 168-175 | Prism / Gobo Macro 6                               |
|                |                       | 176-183 | Prism / Gobo Macro 7                               |
|                |                       | 184-191 | Prism / Gobo Macro 8                               |
|                |                       | 192-199 | Prism / Gobo Macro 9                               |
|                |                       | 200-207 | Prism / Gobo Macro 10                              |
|                |                       | 208-215 | Prism / Gobo Macro 11                              |
|                |                       | 216-223 | Prism / Gobo Macro 12                              |
|                |                       | 224-231 | Prism / Gobo Macro 13                              |
| 232-239        | Prism / Gobo Macro 14 |         |  |
| 240-247        | Prism / Gobo Macro 15 |         |  |
| 248-255        | Prism / Gobo Macro 16 |         |  |
| 13             | 19                    |         | <b>ROTATING PRISMS, PRISMS INDEX ROTATION</b>      |
|                |                       | 0-127   | Prism Indexing                                     |
|                |                       | 128-189 | *CW Prism Rotation from FAST to SLOW               |
|                |                       | 190-193 | NO Rotation  |
|                |                       | 194-255 | *CCW Prism Rotation from SLOW to FAST              |
|                | 20                    |         | <b>ROTATING PRISMS, PRISMS FINE INDEX ROTATION</b> |
|                |                       | 0-255   | Gobo Rotation FINE 16-bit Indexing                 |
| 14             | 21                    |         | <b>FOCUS</b>                                       |
|                |                       | 0-255   | Continuous Adjustment from NEAR to FAR             |
|                | 22                    |         | <b>FOCUS FINE</b>                                  |
|                |                       | 0-255   | Continuous FINE 16-Bit Focus Adjustment            |

| MODE / CHANNEL |               | VALUE   | FUNCTION                                |
|----------------|---------------|---------|---|
| STANDARD       | EXTENDED      |         |   |
| 15             | 23            |         | <b>MOTORIZED ZOOM</b>                   |
|                |               | 0-255   | ZOOM Adjustment from SMALL to BIG       |
|                | 24            |         | <b>MOTORIZED ZOOM FINE</b>              |
|                |               | 0-255   | ZOOM FINE 16-bit Adjustment             |
|                | 25            |         | <b>AUTO FOCUS</b>                       |
|                |               |         | <b>SPOT MODE</b>                        |
|                |               | 0-31    | AUTO FOCUS OFF                          |
|                |               | 32-59   | 26.2 ft (8m)                            |
|                |               | 60-87   | 29.5 ft (9m)                            |
|                |               | 88-115  | 32.8 ft (10m)                           |
|                |               | 116-143 | 36.0 ft (11m)                           |
|                |               | 144-171 | 39.4 ft (12m)                           |
|                |               | 172-199 | 42.7 ft (13m)                           |
|                |               | 200-227 | 46.0 ft (14m)                           |
|                |               | 228-255 | 49.2 ft (15m)                           |
|                |               |         | <b>BEAM MODE</b>                        |
|                |               | 0-21    | AUTO FOCUS OFF                          |
|                |               | 22-39   | 26.2 ft (8m)                            |
|                |               | 40-57   | 29.5 ft (9m)                            |
|                |               | 58-75   | 32.8 ft (10m)                           |
|                |               | 76-93   | 36.0 ft (11m)                           |
|                |               | 94-111  | 39.4 ft (12m)                           |
|                |               | 112-129 | 42.7 ft (13m)                           |
|                |               | 130-147 | 46.0 ft (14m)                           |
|                |               | 148-165 | 49.2 ft (15m)                           |
|                |               | 166-183 | 52.5 ft (16m)                           |
|                |               | 184-201 | 55.8 ft (17m)                           |
|                |               | 202-219 | 59.0 ft (18m)                           |
|                |               | 220-237 | 62.3 ft (19m)                           |
| 238-255        | 65.6 ft (20m) |         |   |
|                | 26            |         | <b>AUTO FOCUS FINE</b>                  |
|                |               | 0-255   | Continuous FINE 16-bit Focus Adjustment |

| MODE / CHANNEL |          | VALUE   | FUNCTION                                   |
|----------------|----------|---------|--|
| STANDARD       | EXTENDED |         |  |
| 16             | 27       |         | <b>SHUTTER, STROBE</b>                     |
|                |          | 0-31    | Shutter CLOSED                             |
|                |          | 32-63   | NO Function (Shutter OPEN)                 |
|                |          | 64-95   | Strobe Effect SLOW to FAST                 |
|                |          | 96-127  | NO Function (Shutter OPEN)                 |
|                |          | 128-159 | Pulse Effect In Sequences                  |
|                |          | 160-191 | NO Function (Shutter OPEN)                 |
|                |          | 192-223 | Random Strobe Effect SLOW to FAST          |
|                |          | 224-255 | NO Function (Shutter OPEN)                 |
| 17             | 28       |         | <b>DIMMER INTENSITY</b>                    |
|                |          | 0-255   | Intensity 0 to 100%                        |
| 18             | 29       |         | <b>DIMMER INTENSITY FINE</b>               |
|                |          | 0-255   | Intensity FINE 16-bit Adjustment 0 to 100% |
| 19             | 30       |         | <b>FROST</b>                               |
|                |          | 0-127   | DISABLE FROST                              |
|                |          | 128-255 | ENABLE FROST                               |
|                | 31       |         | <b>GOBO / CMY / COLOR MACRO SPEED</b>      |
|                |          | 0-255   | MAX to MIN Speed                           |
|                |          |         |  |



| MODE / CHANNEL |          | VALUE   | FUNCTION                         |
|----------------|----------|---------|----------------------------------|
| STANDARD       | EXTENDED |         |                                  |
|                |          |         | <b>CMY / COLOR MACROS</b>        |
|                |          | 0-31    | OFF                              |
|                |          | 32-39   | Macro 1                          |
|                |          | 40-47   | Macro 2                          |
|                |          | 48-55   | Macro 3                          |
|                |          | 56-63   | Macro 4                          |
|                |          | 64-71   | Macro 5                          |
|                |          | 72-79   | Macro 6                          |
|                |          | 80-87   | Macro 7                          |
|                |          | 88-95   | Macro 8                          |
|                |          | 96-103  | Macro 9                          |
|                |          | 104-111 | Macro 10                         |
|                |          | 112-119 | Macro 11                         |
|                |          | 120-127 | Macro 12                         |
|                | 32       | 128-135 | Macro 13                         |
|                |          | 136-143 | Macro 14                         |
|                |          | 144-151 | Macro 15                         |
|                |          | 152-159 | Macro 16                         |
|                |          | 160-167 | Macro 17                         |
|                |          | 168-175 | Macro 18                         |
|                |          | 176-183 | Macro 19                         |
|                |          | 184-191 | Macro 20                         |
|                |          | 192-199 | Macro 21                         |
|                |          | 200-207 | Macro 22                         |
|                |          | 208-215 | Macro 23                         |
|                |          | 216-223 | Macro 24                         |
|                |          | 224-231 | Macro 25                         |
|                |          | 232-239 | Macro 26                         |
|                |          | 240-247 | Macro 27                         |
|                |          | 248-255 | RANDOM CMY                       |
|                |          |         | <b>PAN / TILT MOVEMENT SPEED</b> |
|                |          | 0-225   | MAX to MIN Speed                 |
|                | 33       | 226-235 | Blackout by PAN/TILT Movement    |
|                |          | 236-245 | Blackout by ALL WHEEL Movement   |
|                |          | 246-255 | NO FUNCTION                      |

| MODE / CHANNEL |          | VALUE   | FUNCTION                                     |
|----------------|----------|---------|--|
| STANDARD       | EXTENDED |         |  |
| 20             | 34       |         | <b>LAMP ON/OFF, RESET, INTERNAL PROGRAMS</b> |
|                |          | 0-19    | COLOR Change Normal                          |
|                |          | 20-29   | COLOR Change to Any Position                 |
|                |          | 30-39   | RESERVED                                     |
|                |          | 40-49   | LAMP ON                                      |
|                |          | 50-59   | LAMP OFF                                     |
|                |          | 60-66   | <b>LAMP POWER 190W</b>                       |
|                |          | 67-73   | <b>LAMP POWER 240W</b>                       |
|                |          | 74-79   | <b>LAMP POWER 280W</b>                       |
|                |          | 80-84   | All MOTORS Reset                             |
|                |          | 85-87   | MOVEMENT Reset                               |
|                |          | 88-90   | COLOR Reset                                  |
|                |          | 91-93   | GOBO Reset                                   |
|                |          | 94-96   | DIMMER Reset                                 |
|                |          | 97-99   | OTHER MOTORS Reset                           |
|                |          | 100-119 | INTERNAL PROGRAM 1                           |
|                |          | 120-139 | INTERNAL PROGRAM 2                           |
|                |          | 140-159 | INTERNAL PROGRAM 3                           |
|                |          | 160-179 | INTERNAL PROGRAM 4                           |
|                |          | 180-199 | INTERNAL PROGRAM 5                           |
|                |          | 200-219 | INTERNAL PROGRAM 6                           |
|                |          | 220-239 | INTERNAL PROGRAM 7                           |
|                |          | 240-249 | RESERVED                                     |
|                |          | 250-251 | Display OFF                                  |
|                |          | 252-253 | Display ON                                   |
| 254-255        | RESERVED |         |  |

# ERROR CODES

When power is applied, the unit will automatically enter a “Reset/Test” mode. This mode brings all the internal motors to a home position. If there is an internal problem with one or more of the motors an error code will flash in the display in the form of “XXEr” where XX will represent a function number. For example, when the display shows “0Er” it means there is some type of error with the Pan motor. If there are multiple errors during the start-up process they will all flash in the display. For example: if the fixtures has errors on **Channel 1, 2, and 5** all at the same time, you will see the error message “01Er”, “02Er”, and ”05Er” flash repeated 5 times.

If an error does occur during the initial start-up procedure the fixture will self-generate a second reset signal and try to realign all the motors and correct the errors. If the error persists after a second attempt a third attempt will be made. If after a third attempt all the errors have not been corrected the fixture will make the following determinations:

**3 or More Errors** - The fixture cannot function properly with three or more errors therefore the fixture will place itself in a stand-by mode until subsequent repairs can be made.

**Less Than 3 Errors** - The fixture has less than 3 errors; therefore, most other functions will work properly. The fixture will attempt to operate normally until the errors can be correct by a technician. The errors in question will remain flashing in the display as a reminder of internal errors.

| Error Codes subject to change without notice. |   |
|---|---|
| ERROR CODES                                   | DESCRIPTION   |
| PAN Er  | Movement is not located in the default position after the reset. This message will appear after a fixture reset if the magnetic-indexing circuit malfunctions (sensor failed, or magnet is missing) or there is a motor failure (defective motor or a defective motor IC drive on the main PCB). This error may also be displayed if the head/yoke was blocked during a reset function. |
| TILT Er                                       |   |
| Cyan Color Wheel Er                           |   |
| Magenta Color Wheel Er                        |   |
| Yellow Color Wheel Er                         |   |
| Color Wheel Er                                |   |
| Gobo Wheel 1 Er                               |   |
| Gobo Rotation Wheel 1 Er                      |   |
| Dimmer Wheel Er                               |   |
| Fixed Gobo Wheel Er                           |   |
| Prim 3 Wheel Er                               |   |
| Prism Rotation 1 Wheel Er                     |   |
| Prism 16 Wheel Er                             |   |
| Focus Wheel Er                                |   |
| Zoom Wheel Er                                 |   |
| Frost Wheel Er                                |   |

# SPECIFICATIONS

## SOURCE

Philips™ MSD Platinum 200 Flex 280W Lamp

Up To 6,000 Hour Lamp Life\*

\*Test lab conditions. May vary depending on several factors including but not limited to:

Environmental Conditions, Power/Voltage, Usage Patterns (On-Off Cycling), Control, Dimming, and Lamp Mode.

## PHOTOMETRIC DATA

11,000 Total Output Lumen

128,426 LUX 11,931 FC @49.2' (15m) (Min Zoom Beam) 135,108 LUX 12,552 FC @16.4' (5m) (Min Zoom Spot)

### Beam

Zoom Range 1° - 18°

Beam Angle 1.1° - 7°

Field Angle 2.6° - 17.8°

### Spot

Zoom Range 3° - 27°

Beam Angle 1.8° - 18.7°

Field Angle 2.8° - 28.8°

### Wash

Zoom Range 5° - 33°

Beam Angle 2.6° - 24.9°

Field Angle 4.6° - 40.7°

## EFFECTS

Beam, Spot, Wash Modes

Motorized Zoom 1° - 18° Beam, 3° - 27° Spot, 5° - 33° Wash

Full Frost Filter for Wash Effects

16-Facet and 4-Facet Linear Prisms

CMY Color, Gobo, Prism Macros

Motorized Focus with Auto-Focus Feature

High Speed Shutter and Strobe

## COLOR

Full CMY Color Mixing System

13 Colors including Quad Color, CTO, CTB, and UV

## GOBOS

2 Gobo Wheels

8 Rotating / Indexing Interchangeable Glass Gobos

12 Static-Stamped Metal Gobos

## CONTROL / CONNECTIONS

2 DMX Channel Modes (20 / 34)

DMX, RDM, Art-NET, sACN Protocol Support

(6) Button Touch Control Panel

Full Color 180° Reversible LCD Menu Display

IP65 5pin XLR DMX In/Out

IP65 RJ45 ethernet In/Out

IP65 Locking Power Cable In

With Wired Digital Communication Network

## SIZE / WEIGHT

Length: 17.5 in (444.71mm)

Width: 17.88 in (459mm)

Height: 26.97 in (685mm)

Weight: 78.26 lbs. (35.5kg)

## ELECTRICAL / THERMAL

AC 100-240V 50/60Hz

Max Power Consumption 500W





BTU/hr (+/- 10%) 1705

## APPROVALS / RATINGS

CE | cETLus | IP65


Specifications and improvements in the design of this unit and this manual are subject to change without notice.

# DIMENSIONAL DRAWINGS

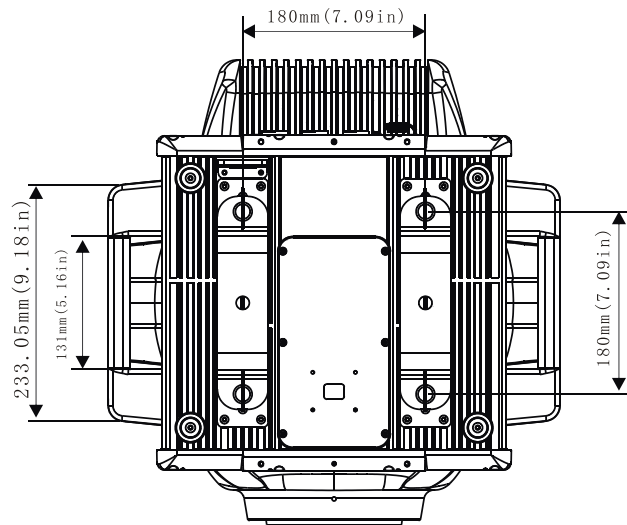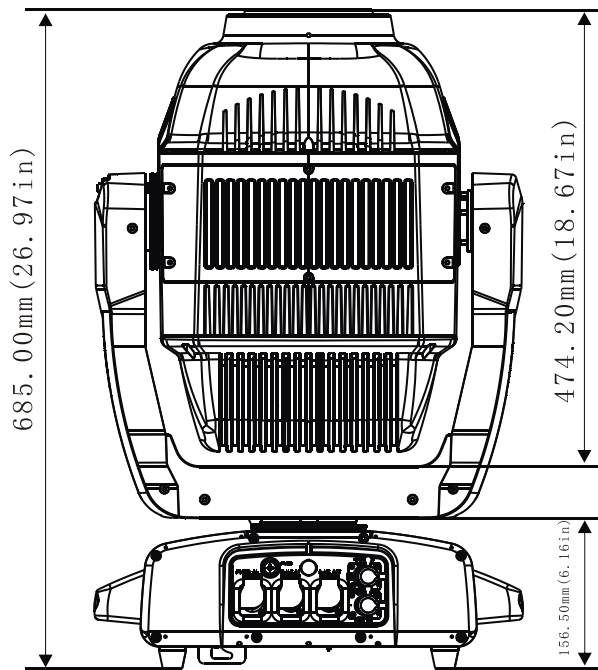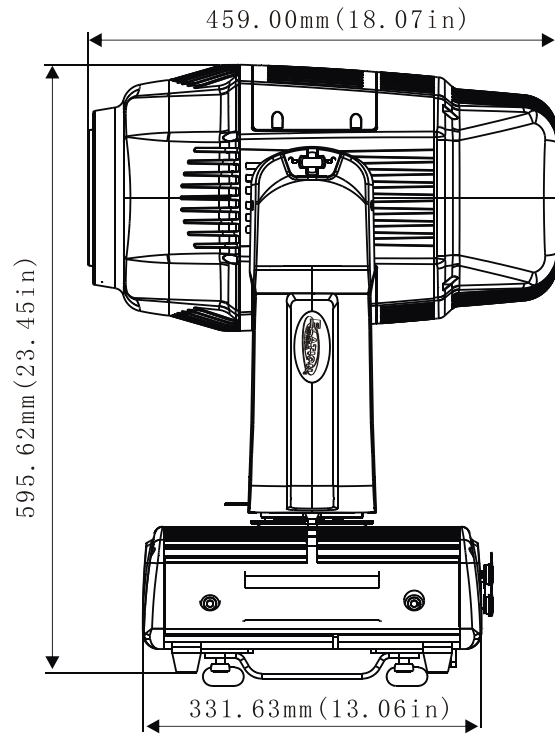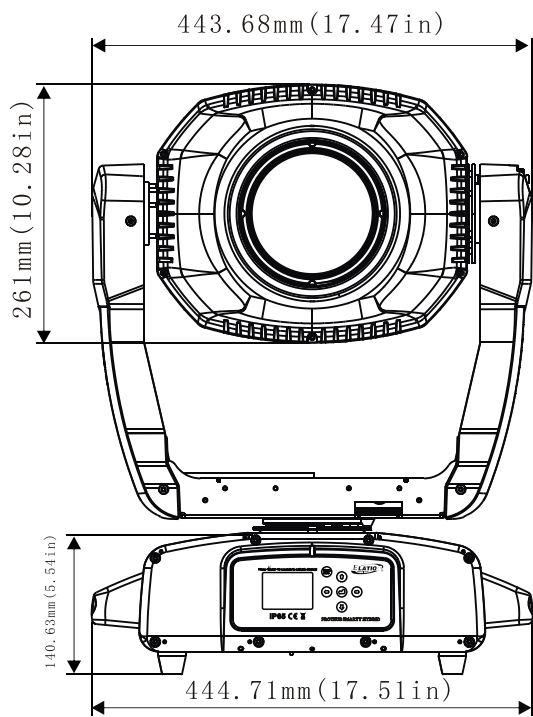

Specifications and improvements in the design of this unit and this manual are subject to change without notice.

# DIMENSIONAL DRAWINGS – FOAM INLAY

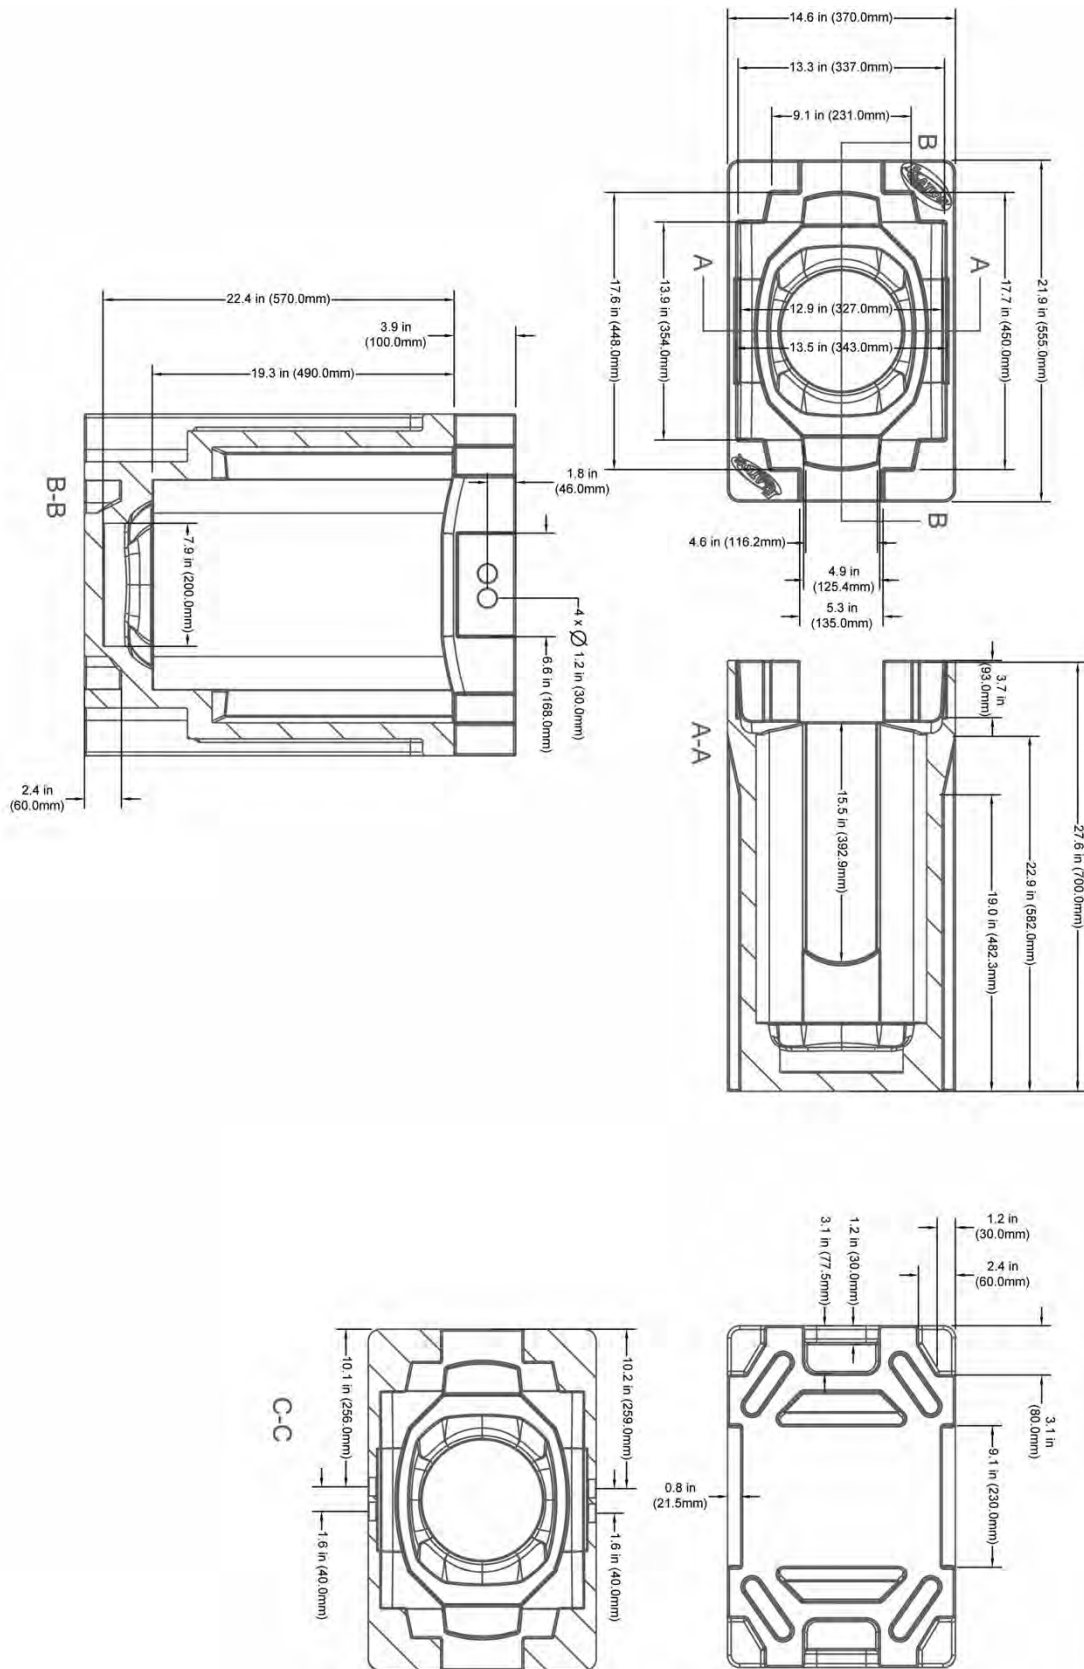

## OPTIONAL ACCESSORIES

| ORDER CODE    | ITEM                                       |
|---------------|--|
| IP TESTER     | IP Fixture Vacuum and Pressure Leak Tester |
| TRIGGER CLAMP | Heavy Duty Wrap Around Hook Style Clamp    |
| STR527        | 5 ft. (1.5m) IP65 5pin XLR Cable           |
| CAT628        | 5 ft. (1.5m) IP65 CAT6 Ethernet Cable      |
|               | Additional Cable Lengths Available         |

### FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC RADIO FREQUENCY INTERFERENCE WARNINGS & INSTRUCTIONS

This product has been tested and found to comply with the limits as per Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device uses and can radiate radio frequency energy and, if not installed and used in accordance with the included instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following methods:

- Reorient or relocate the device.
- Increase the separation between the device and the receiver.
- Connect the device to an electrical outlet on a circuit different from which the radio receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Europe Energy Saving Notice

#### Energy Saving Matters (EuP 2009/125/EC)

Saving electric energy is a key to help protecting the environment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you.



